Sidekick Pro™ Installation & Operation Manual

016-0171-391 Rev. E

04/18

E31210

Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

Chapter 1	Important Safety Information	1
-	s for Wire Routing	
	s for Hose Routing	
mstructions	s for Flose Routing	
Chapter 2	Introduction	5
•	erview	5
	ı System Components	
-	o Features	
Closed C	Calibration System	5
•	ed Motor Control Node	
	e Response	
•	Diagnostics	
	o Pump Specifications	
Updates .		11
Chanter 3	Installation	13
-	Installation	
	bing and Point of Injection	
	ctices	
	Sidekick Pro Pump and Chemical Tank	
	he Injection Module	
	he Chemical Tank	
	he Sidekick Pro Pump	
Sidekick Pro	o Injection System Plumbing	22
Plumb th	ne Sidekick Pro Pump	22
	ne Sidekick Pro Closed Calibration System	
	ne Optional Rinse Assist System	
	d Power Connections	
	ion 1 Cabling Platform	
	ion 2 Cabling Platform	
	Pro CANbus Connection	
	and Addressing the Motor Control Node	
	e Method to Readdress the Injection Motor Control Node	
Verifying In	stallation of the Sidekick Pro	33
Chapter 4	Calibration and Operation	35
•	nsole Calibration	
	/pe	
	al	
Valve Ty	pe and Valve Cal	37
Rate Cal		37
Flow Cal	(Envizio Pro only)	38
	(SCS 4000/5000 Series and Viper Pro only)	
	Transducer Calibration	
	tures and Application Modes	
	Application Mode	
Ratio Ra	te Application Mode	40

Table of Contents

	onitor Features	
	onon Priming and Calibration	
	Control Console Settings	
•	he Injection Pump	
	e the Injection Pump	
Ganarat	is the hysothem is amp	······································
Chapter 5	Setting Application Mode and Injection Diagnostics	47
Viper Pro		47
Applica	tion Mode Setup	47
Injectio	n Diagnostics Display	48
Envizio Pro)	49
• •	tion Mode Setup	
	g Alarms	
•	n Diagnostics Display	
	5000 Series	
	tion Mode Setupn Diagnostics Display	
injectio	Ti Diagnostics Display	
Chapter 6	System Maintenance	55
Maintenan	ce and Cleaning	55
Check \	/alve O-Rings	56
Pump C	Cam and Bearing	58
	Seal Replacement	
Seasonal N	Maintenance and Storage	61
Returning	the Pump for Service or Repair	62
Chapter 7	Troubleshooting	65
	ntrol Node LED Status Indicators	
	ITIOI Node LED Status Indicators	
Alai IIIS		00
Chapter 8	Replacement Parts	69
Sidekick Pr	o Injection Module Parts	69
Sidekick Pr	ro Pump Replacement Parts	70
	n Pump Pressure Transducer	
Injection Pump Vacuum Switch Injection Pump Flow Monitor Sensor		
Chapter 9	System Diagrams	79

CHAPTER

IMPORTANT SAFETY INFORMATION

1

NOTICE

Read this manual carefully before installing the Raven Sidekick Pro or any other system components.

- · Follow all safety information presented within this manual.
- Keep safety labels in good condition. Replace missing or damaged safety labels as necessary and verify labels
 are included on replacement parts or new equipment components. Replacement safety labels are available
 from any local Raven dealer.
- Contact a local Raven dealer for support with any portion of the installation or service of Raven equipment.

When operating the machine after installing the Raven Sidekick Pro, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate any agricultural equipment while under the influence of alcohol or an illegal substance.
- Determine and remain a safe working distance from obstacles or other individuals. The equipment operator is responsible for disabling the system when a safe working distance has diminished.

INSTRUCTIONS FOR WIRE ROUTING

The word "harness" is used to mean all electrical leads and cables, bundled and unbundled. When installing harness, secure it at least every 30 cm (12in) to the frame. Follow existing harness as much as possible and use these guidelines:

Harness should not contact or be attached to:

- Lines and hoses with high vibration forces or pressure spikes
- Lines and hoses carrying hot fluids beyond harness component specifications

Avoid contact with any sharp edge or abrading surfaces such as, but not limited to:

- Sheared or flame cut edges
- Edges of machined surfaces
- · Fastener threads or cap screw heads
- Ends of adjustable hose clamps
- Wire exiting conduit without protection, either ends or side of conduit
- Hose and tube fittings

Routing should not allow harnesses to:

- · Hang below the unit
- Have the potential to become damaged due to exposure to the exterior environment. (i.e. tree limbs, debris, attachments)
- Be placed in areas of or in contact with machine components which develop temperatures higher than the temperature rating of harness components
- Wiring should be protected or shielded if it needs to route near hot temperatures beyond harness component specifications

Harnessing should not have sharp bends

Allow sufficient clearance from machine component operational zones such as:

- Drive shafts, universal joints and hitches (i.e. 3-point hitch)
- Pulleys, gears, sprockets
- · Deflection and backlash of belts and chains
- · Adjustment zones of adjustable brackets
- · Changes of position in steering and suspension systems
- Moving linkages, cylinders, articulation joints, attachments
- · Ground engaging components

For harness sections that move during machine operation:

- Allow sufficient length for free movement without interference to prevent: pulling, pinching, catching or rubbing, especially in articulation and pivot points
- Clamp harnesses securely to force controlled movement to occur in the desired harness section
- · Avoid sharp twisting or flexing of harnesses in short distances
- Connectors and splices should not be located in harness sections that move

Protect harnesses from:

- Foreign objects such as rocks that may fall or be thrown by the unit
- Buildup of dirt, mud, snow, ice, submersion in water and oil
- Tree limbs, brush and debris
- Damage where service personnel or operators might step or use as a grab bar
- Damage when passing through metal structures

IMPORTANT:

Avoid directly spraying electrical components and connections with high pressure water. High pressure water sprays can penetrate seals and cause electrical components to corrode or otherwise become damaged. When performing maintenance:

- Inspect all electrical components and connections for damage or corrosion. Repair or replace components, connections, or cable as necessary.
- Ensure connections are clean, dry, and not damaged. Repair or replace components, connections, or cable as necessary.
- Clean components or connections using low pressure water, pressurized air, or an aerosol electrical component cleaning agent.
- Remove visible surface water from components, connections, or seals using pressurized air or an aerosol electrical component cleaning agent. allow components to dry completely before reconnecting cables.

INSTRUCTIONS FOR HOSE ROUTING

The word "hose" is used to mean all flexible fluid carrying components. Follow existing hoses as much as possible and use these guidelines:

Hoses should not contact or be attached to:

- Components with high vibration forces
- · Components carrying hot fluids beyond component specifications

Avoid contact with any sharp edge or abrading surfaces such as, but not limited to:

- Sheared or flame cut edges
- Edges of machined surfaces
- Fastener threads or cap screw heads
- Ends of adjustable hose clamps

Routing should not allow hoses to:

- Hang below the unit
- Have the potential to become damaged due to exposure to the exterior environment. (i.e. tree limbs, debris, attachments)
- Be placed in areas of or in contact with machine components which develop temperatures higher than the temperature rating of hose components
- Hoses should be protected or shielded if it needs to route near hot temperatures beyond hose component specifications

Hoses should not have sharp bends

Allow sufficient clearance from machine component operational zones such as:

- Drive shafts, universal joints and hitches (i.e. 3-point hitch)
- Pulleys, gears, sprockets
- Deflection and backlash of belts and chains
- Adjustment zones of adjustable brackets
- Changes of position in steering and suspension systems
- Moving linkages, cylinders, articulation joints, attachments
- · Ground engaging components

For hose sections that move during machine operation:

- Allow sufficient length for free movement without interference to prevent: pulling, pinching, catching or rubbing, especially in articulation and pivot points
- Clamp hoses securely to force controlled movement to occur in the desired hose section
- Avoid sharp twisting or flexing of hoses in short distances

Protect hoses from:

- Foreign objects such as rocks that may fall or be thrown by the unit
- Buildup of dirt, mud, snow, ice, submersion in water and oil
- Tree limbs, brush and debris
- Damage where service personnel or operators might step or use as a grab bar
- Damage when passing through metal structures

CHAPTER 1

High pressure wash

CHAPTER

INTRODUCTION

2

SYSTEM OVERVIEW

The Raven Sidekick Pro injection system is designed to provide efficient and accurate application of liquid chemicals applied from an injection module. Using a separate injection module, or tank, eliminates mixing chemicals and reduces chemical waste, and simplifies equipment care and maintenance.

Sidekick Pro provides connectivity to a Raven CANbus system to allow an existing Raven CAN control console to control the rate of the chemical injection system.

After proper installation and calibration of the injection system and Raven controller, including a set target rate for the carrier and injected chemicals, the operator enables the product control system and the control console will automatically maintain the flow regardless of vehicle speed or active boom sections.

Performance of the Raven injection system relies upon proper installation and maintenance of the complete sprayer system. Please review this manual before installing or operating this system to help ensure proper setup and follow instructions provided for proper care and maintenance of the Raven injection system.

INJECTION SYSTEM COMPONENTS

The Raven injection system consists of:

- Raven CAN based control console and appropriate cabling
- Sidekick Pro injection pump
- · In-line mixer
- Cabling required to connect injection system components and existing CANbus
- Check valves

The following Raven CAN control consoles may be used with the injection system

- SCS 4000/5000 Series
- · Envizio Pro or Envizio Pro II
- Viper Pro and Viper 4 Pro

SIDEKICK PRO FEATURES

CLOSED CALIBRATION SYSTEM

Calibrating chemical injection pumps is necessary for accurate chemical injection applications. The Sidekick Proclosed calibration system allows the operator to perform calibration or system tests without catching or handling dangerous chemicals.


PRIMING

An automatic priming feature ensures the pump is correctly primed and ready for operation when the operator is ready to apply product.

PUMP CALIBRATOR

The pump calibrator provides a quick tool to check pump efficiency and verify that the pump is ready for operation.

FIGURE 1. Pump Calibrator

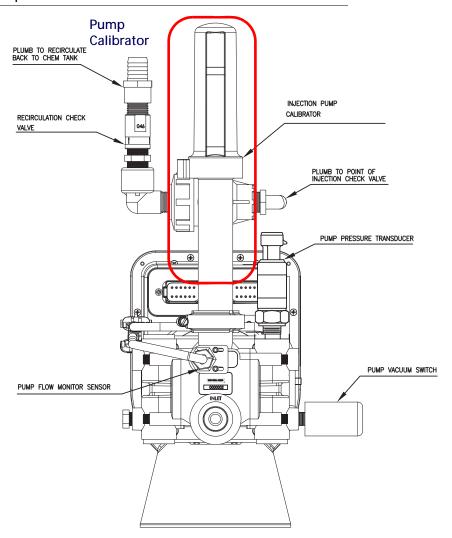

INTEGRATED MOTOR CONTROL NODE

Sidekick Pro features an integrated motor control node mounted directly on the pump housing for simplified installation and enhanced performance. The control node features status LEDs which provide status and CAN communication information which the operator may be able to use during calibration or system troubleshooting.

INTEGRATED CALIBRATION SWITCH


The integrated motor control node also features a sealed calibration switch. The sealed calibration switch allows the operator to begin the pump calibration process by passing a metallic object, such as a screwdriver, across the

switch sensor on the Sidekick Pro injection pump. This feature allows the operator to run multiple calibration tests quickly and easily and ensure the system is ready for operation.

NOTE: Calibration may also be initiated from the control console in the vehicle cab. See the Calibrate the Injection Pump section on page 42 for a detailed calibration procedure.

The calibration status LED light will flash when the calibration sensor registers a metallic object by the switch. Pass the metal object past the sensor twice to initiate a pump calibration.

FIGURE 2. Motor Control Node Calibration Sensor

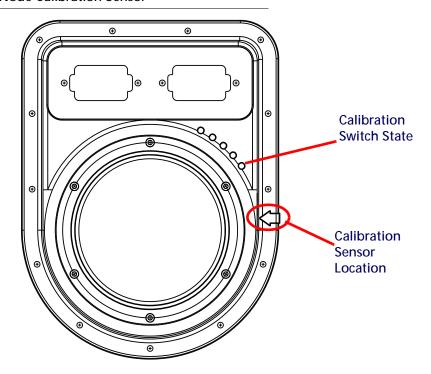

FAST RATE RESPONSE

The Sidekick Pro direct injection system is capable of making accurate adjustments to chemical injection rates more quickly than previous Raven injection systems to help ensure accurate and proper chemical applications in the field.

SYSTEM DIAGNOSTICS

Enhanced diagnostic features are monitored by the control console during operation of the Sidekick Pro injection system to help identify potential issues and minimize equipment down time. Refer to Chapter 5, Setting Application Mode and Injection Diagnostics for more information on using diagnostics features on a specific console.

FLOW MONITORING

The CAN integrated Sidekick Pro offers enhanced monitoring of pump operation during chemical injection applications to alert the operator to conditions such as an empty chemical supply tank, low injection pressure, incorrect meter calibration, or issues with the injection pump valves.

RINSE ASSIST (OPTIONAL - REQUIRES KIT P/N 117-0171-733)

The Sidekick Pro™ Rinse Assist system allows an operator to quickly rinse the Sidekick Pro™ direct injection pump without leaving the machine cabin. The Rinse Assist system utilizes an automated 3-way rinse valve to switch the Inlet source to a rinse tank valve and components which may help to ensure problem free operation of the Sidekick Pro™ injection system. when the rinse process is complete, the automated 3-way valve returns to the chemical supply tank inlet setting and is ready for the next application.

The following is required to utilize a Raven Rinse Assist system:


- Rinse Assist Ready Sidekick Pro injection pump:
 - RINSE ASSIST READY must be displayed on the injection pump label.
 - Sidekick Pro integrated motor control node firmware 1.23.15 or newer.
- Compatible Raven field computer or console:
 - Envizio Pro Series with software version 3.7 or newer.
 - Viper Pro with software version 3.10 or newer.
- Rinse Assist Ready Sidekick Pro Injection Pump cabling:
 - Generation 1 cable (P/N 115-0172-192)
 - Generation 2 cable (P/N 115-0172-191)

SIDEKICK PRO PUMP SPECIFICATIONS

The Raven Sidekick Pro injection pump is a positive displacement, variable speed piston pump used for direct chemical injection applications.


	Pump		
	(See Figure 3 on page 9 or Figure 4 on page 10)		
Dimensions	Injection Module		
	Width - 28.5" [71.12 cm]		
	Depth - 12" [30 cm] (17" [43 cm] with plumbing)		
	Height - 42" [106.75 cm]		
Pistons	1 (Dual Acting) at 0.750 in Dia. [1.910 cm]		
Maximum Stroke Length	0.390 in [0.99 cm]		
	P/N 063-0173-081 P/N 063-0173-103		
Flow Output Range	5-200 oz./min. 1-40 oz./min.		
	[1.5-59 dL/min.] [0.3-11.8 dL/min.]		
Maximum Operating Pressure	150 psi [1034 kPa]		
Maximum Power Required	1/4 HP [186.4 W]		
Maximum Recommended Suction Lift	2 ft. [0.6 m]		
Inlet and Outlet Plumbing	Mates with Banjo M100 Flange and 3/4" Female NPT		
Wetted Parts	Polypropylene Stainless Steel		
Body Material	Polypropylene		
Wetted Seals/O-Rings	V965-80 Viton and Graphite Filled Teflon		

FIGURE 3. Sidekick Pro Injection Pump Dimensions (in inches)

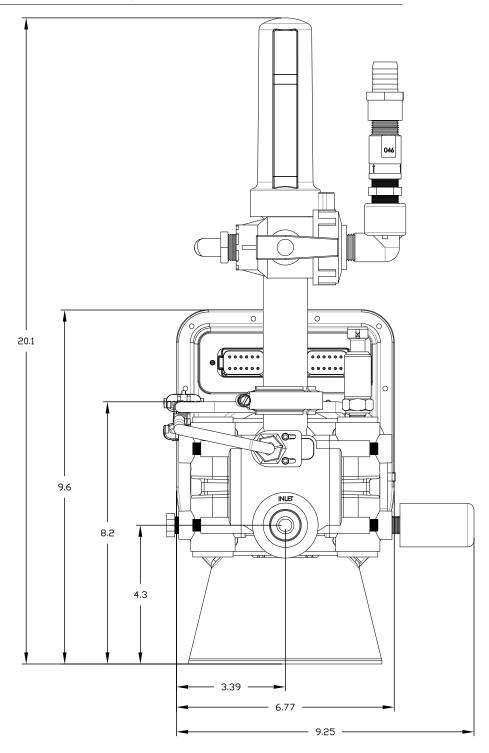

NOTE: 5-200 oz./min. pump shown. Basic dimensions are the same for 1-40 oz./min. pump.

FIGURE 4. Sidekick Pro Injection Pump Dimensions (Cont.)

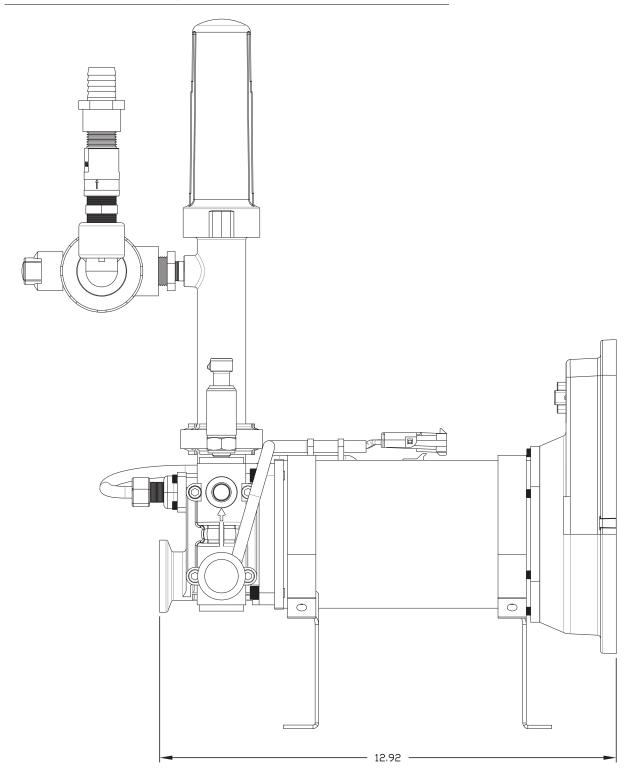

NOTE: 5-200 oz./min. pump shown. Overall length of 1-40 oz./min. pump is 13.25 inches [33.66 cm].

UPDATES

Updates for Raven manuals as well as several system components are available at the Applied Technology Division web site:

https://portal.ravenprecision.com/

Sign up for e-mail alerts to receive notice when updates for your Raven products are available on the Raven web site.

At Raven Industries, we strive to make your experience with our products as rewarding as possible. One way to improve this experience is to provide us with feedback on this manual.

Your feedback will help shape the future of our product documentation and the overall service we provide. We appreciate the opportunity to see ourselves as our customers see us and are eager to gather ideas on how we have been helping or how we can do better.

To serve you best, please send an email with the following information to

techwriting@ravenind.com

- -Sidekick Pro™ Installation & Operation Manual
- -Manual No. 016-0171-391 Rev. E
- -Any comments or feedback (include chapter or page numbers if applicable).
- -Let us know how long have you been using this or other Raven products.

We will not share your email or any information you provide with anyone else. Your feedback is valued and extremely important to us.

Thank you for your time.

INSTALLATION

3


OVERVIEW

The following steps must be completed to install a Raven Sidekick Pro injection system:

- 1. Select and plumb the point of injection. See page 14.
 - a. Install carrier and chemical injection check valves.
 - b. Install in-line mixer.
- 2. Mount the Sidekick Pro injection module or tank. See page 18.
- 3. Mount the Sidekick Pro injection pump. See page 20.
- 4. Plumb the Sidekick Pro pump and injection lines into the main carrier line at point of injection. See page 22.
- 5. Install the closed calibration system. See page 22.
- 6. Plumb the recommended rinse system. See page 23.
- 7. Connect the Sidekick Pro injection pump to CANbus. See page 24.
- 8. Connect the Sidekick Pro pump to source of electrical power. See page 24.

The following sections provide detailed information and procedure to assist with completing the above steps. Contact a local Raven dealer for assistance or questions during the installation procedure.

FIGURE 1. Example Sidekick Pro Injection System

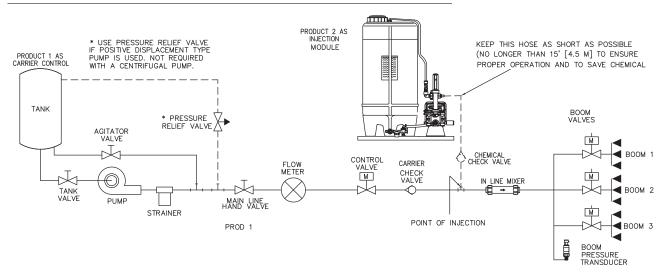


INITIAL PLUMBING AND POINT OF INJECTION

BEST PRACTICES

- The Raven Sidekick Pro injection system pumps chemical into the main carrier line at the point of injection. This point must be on the pressure side of the carrier product pump and should be as close to the boom section valves as possible.
- It is not necessary for injected products or chemicals to be measured by the flow meter. Depending upon the type of applications or chemical mixtures the injection system will normally be used with, it may be more desirable to place the injection point after the flow meter. This configuration may help to extend the service life of the flow meter by minimizing exposure to corrosive chemicals to the flow meter components.
- Check valves should be used in both the carrier and injection lines to prevent back flow and contamination of carrier and chemical reservoirs.
- An in-line mixer also should be installed after the point of injection to ensure even mixing of the injected product.
- The following options are available for setting up the point of injection:
 - An in-line mixer assembly with a carrier check valve included. This option requires use of a separate injection check valve for each injected chemical.
 - Separate carrier check valve, point of injection tee, and mixer fittings for each injected product. Additional tee fittings may be required for additional injection products and a separate injection check valve is required for each injected chemical.

FIGURE 2. Point of Injection Detail

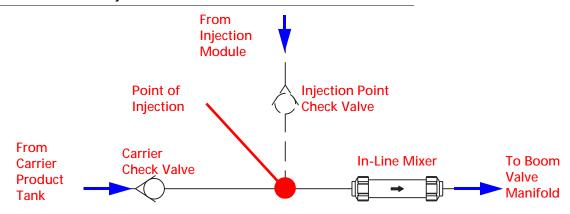


To set up the point of injection:

- 1. Select the point of injection.
- 2. Install a carrier check valve or a mixer assembly in the main product line to prevent back flow to the carrier reservoir.
 - Refer to Table 1, "Check Valve Sizing and Selection Chart," on page 16 for assistance with proper sizing of the carrier check valve or see Figure 4 on page 17 for details on available mixer assemblies.
- 3. Install tee type fitting, or fittings, suitable for chemical applications after the carrier check valve as needed. Tee fittings may be installed in mixer assemblies to provide inlets for additional injection systems.
- 4. Install an in-line mixer to the through port of the tee fitting and connect to the existing carrier product line or boom valve manifold. Use Figure 4 on page 17 to determine proper sizing of the in-line mixer.

5. Install a chemical injection check valve to the injection line in front of the point of injection to prevent back flow to the chemical reservoir. Use Table 1, "Check Valve Sizing and Selection Chart," on page 16 to determine proper sizing of the carrier check valve.

NOTE: It is important to flush the injection point check valve periodically and when changing chemicals to preserve proper operation.

FIGURE 3. Check Valve Thread

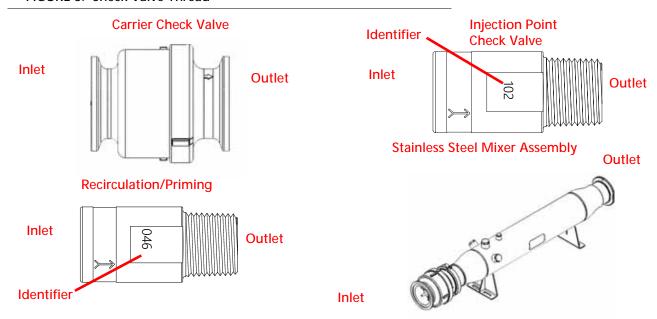

NOTE: Be sure to install the check valves with the flow direction indicator pointing in the direction of chemical flow.

TABLE 1. Check Valve Sizing and Selection Chart

	Raven Part No.	Inlet	Outlet	Flow Coefficient ^a
Recirculation and Priming Check Valve ^b	333-0011-100	1/2" (F)	1/2" (M)	N/A
Injection Point Check Valve ^c	333-0011-102	1/2" (F)	1/2" (M)	N/A
	333-0011-090	1"	1"	14
	333-0011-091	1-1/4"	1-1/4"	22
Carrier Check Valve	333-0011-104	M220 Banjo Flange	M220 Banjo Flange	70
	333-0011-105	M300 Banjo Flange	M300 Banjo Flange	110

a. The flow coefficient (C_v) is the volume per minute (water) at which the pressure drop equals 1 PSI [6.9 kPa].

b. "046" Identifier. Rated for 12 PSI [82.7 kPa] and has 0.046" bleed hole. Verify the check valve is installed with the flow arrow pointing in the direction of flow through the valve.

c. "102" Identifier. Rated for 12 PSI [82.7 kPa] Verify the check valve is installed with the flow arrow pointing in the direction of flow through the valve.

FIGURE 4. In-Line Mixer and Mixer Assembly Options (D/N 016-0171-579)

INLINE MIXER SELECTION CHART



063-0171-303 1 IN. POLYPROPYLENE FITTINGS WITH STAINLESS STEEL PIPE NO CHECK VALVE INCLUDED



063-0159-632 1-1/4 IN. POLYPROPYLENE FITTINGS WITH STAINLESS STEEL PIPE NO CHECK VALVE INCLUDED



063-0171-300 2 IN. POLYPROPYLENE FITTINGS WITH STAINLESS STEEL PIPE NO CHECK VALVE INCLUDED THIS GROUP OF MIXERS HAVE A PRESSURE DROP OF 1 PSI @ 25 GPM WATER



333-9000-010 3 IN. STAINLESS STEEL NO CHECK VALVE INCLUDED HIS MIXER HAS A PRESSURE DROP OF 1 PSI @ 60 GPM WATER



063-0173-770 1-1/2 IN. STAINLESS STEEL (FOR NH3) NO CHECK VALVE INCLUDED

REFER TO PRESSURE DROP VS. FLOW RATE CHART



063-0173-737 2 IN. POLYPROPYLENE CHECK VALVE INCLUDED M 220 BANJO FLANGE FITTINGS



063-0173-698 3 IN. STAINLESS STEEL CHECK VALVE INCLUDED M 300 BANJO FLANGE FITTINGS



063-0173-699 4 IN. STAINLESS STEEL CHECK VALVE INCLUDED M 300 BANJO FLANGE FITTINGS

> 016-0171-579 07/17 REV. B SHEET 1 OF 1 E29857

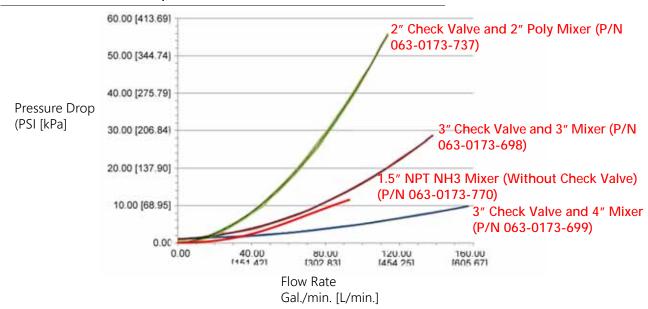


FIGURE 5. Pressure Drop vs. Flow Rate

MOUNT THE SIDEKICK PRO PUMP AND CHEMICAL TANK

Installation and mounting of the Sidekick Pro injection pump and injection module, or chemical tank, will vary between implements. Use the following sections to help select an appropriate mounting location on the implement.

MOUNT THE INJECTION MODULE

The Raven Sidekick Pro ISO injection module provides a platform for mounting the chemical supply tank and Sidekick Pro ISO injection pump in the optimal configuration for pump operation.

NOTE: The Raven Sidekick Pro ISO injection module may be ordered with a 24 gallon chemical supply tank, 50 gallon chemical supply tank, or without a chemical tank to connect the injection system with an existing tank on the vehicle or purchased separately.

- Mount the injection module platform in an area close to the boom valve manifold. This minimizes the volume of chemical in the injection line between the pump and point of injection and allows for more accurate control of the injected chemical.
- Verify that the hand valves and drain are accessible in the selected mounting location.
- Verify that the injection pump is accessible to perform periodic maintenance.

The assembled injection module will measure approximately as follows:

Tank Capacity	Width	Depth	Height
24 Gallon	28.5" [71.12 cm]	12" [30 cm] (17" [43 cm] with plumbing)	42" [106.75 cm]
50 Gallon	37" [94 cm]	18" [45.72 cm]	62" [157.5 cm]

FIGURE 6. 24 Gallon Injection Module Platform and Tank Dimensions


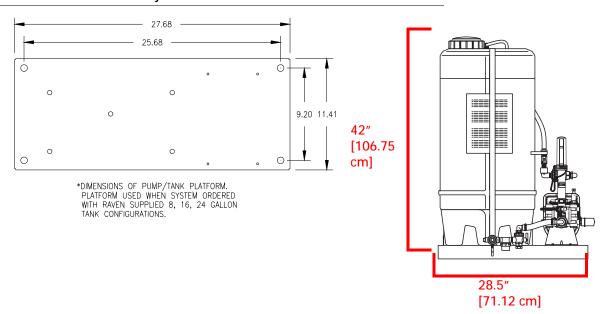


FIGURE 7. 50 Gallon Injection Module Platform and Tank Dimensions (From Kit P/N 117-0175-035)

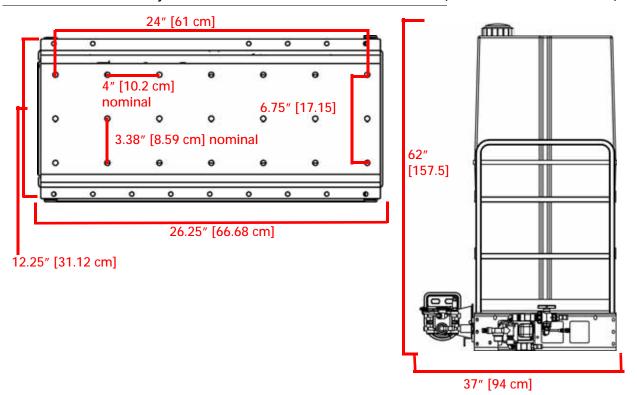

MOUNT THE CHEMICAL TANK

NOTE: If a Raven injection module is used, the supplied platform provides an ideal mounting configuration for the Sidekick Pro injection pump and chemical tank.

• Mount the chemical tank or injection module as close as possible to the injection pump. Minimize the length of the product line between the chemical tank and injection pump. Avoid any product lines longer than 5 ft. [1.5 m] between the chemical tank and injection pump inlet port.

NOTE:

Long product lines between the chemical tank and injection pump may cause high vacuum pressures on the pump inlet, long pump priming times or difficulty priming the pump, and larger amounts of chemical waist during rinsing.


If vacuum errors are encountered during pump operation, one or both of the following corrective measures may be necessary to reduce inlet pressure:

- Reduce the inlet plumbing length
- Increase the tubing size
- Mount the Sidekick Pro pump so that the line between the injection pump and chemical supply tank is near level with a slight incline to help relieve air bubbles. The line connected to the pump inlet must not raise chemical above 2 ft. [0.6 m] from the chemical supply tank outlet. See Figure 10 on page 24.

MOUNT THE SIDEKICK PRO PUMP


- Mount the Sidekick Pro pump as close as possible to the selected point of injection.
- Mount the Sidekick Pro pump so that the outlet port is pointing up. The pump will not meter product application correctly if the pump is mounted in any other orientation.
- The Sidekick Pro should be mounted in a location which provides access to the pump and control node to simplify calibration and troubleshooting.

FIGURE 8. Sidekick Pro Pump Mounting and Bracket Orientation

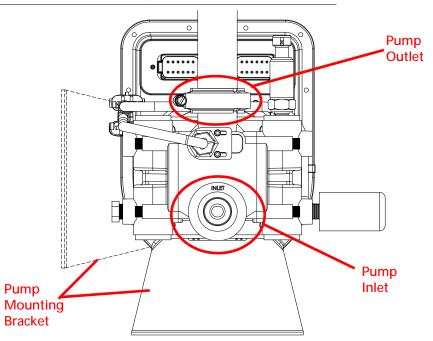

NOTE: The pump mounting bracket may be rotated to accommodate mounting to a vertical surface, however, the injection pump must be mounted level with the outlet port perpendicular to the ground.

FIGURE 9. Sidekick Pro Pump Mounting Bracket Bolt Pattern

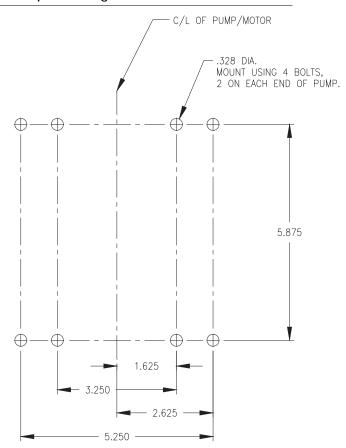

SIDEKICK PRO INJECTION SYSTEM PLUMBING

PLUMB THE SIDEKICK PRO PUMP

PUMP INI FT

Use 3/4" chemically resistant hose between the chemical tank and injection pump inlet. Do not use hose or tubing that may collapse when a vacuum is applied during pump operation.

The product line should be as straight as possible. Avoid low spots in plumbing to ease pump priming and avoid chemical waist.


STRAINER

A strainer with a #20 mesh screen must be installed on the inlet side of the injection pump.

PUMP OUTLET

Connect the pump outlet to the injection check valve at the point of injection. Use the following hose sizes depending upon the capacity of the injection pump used with the system.

Pump Capacity	Hose Size
1-40 oz./min.	3/8"
5-200 oz./min.	1/2"

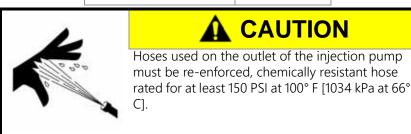

Avoid product lines longer than 15 ft. [4.5 m] between the pump outlet and the point of injection. Long runs can cause increased pressure in the pump heads which cause the pump to pull more electrical current and may raise the temperature of the injection pump motor and integrated motor control node. See the Setting Application Mode and Injection Diagnostics section on page 47 for details on injection system diagnostics and to monitor pump pressure and node temperature.

PLUMB THE SIDEKICK PRO CLOSED CALIBRATION SYSTEM

The Sidekick Pro closed calibration system provides an environmentally effective method of calibrating the injection pump without exposing the operator to dangerous or hazardous chemicals.

PUMP CALIBRATOR

To provide accurate calibration of the injection pump, the pump calibrator (P/N 063-0172-822) must be installed directly onto the outlet of the pump. This configuration prevents air from getting trapped between the injection pump and the calibration plunger. Trapped air will cause the plunger to feel "spongy" when pressed and will cause the pump calibrator to work improperly.

3-WAY VALVE

A 3-way valve must be plumbed after the closed calibration system to allow chemical to be directed either back to the chemical tank or to the point of injection.

HOSES

Use chemically resistant hose compatible with the chemicals which will be used with the injection system. Follow the same hose specifications as described in the Pump Outlet section on page 22 with the closed calibration system.

RECIRCULATION CHECK VALVE

A recirculation and priming check valve (P/N 333-0011-100) must be plumbed into the recirculation line between the 3-way valve on the outlet side of the injection pump and the chemical tank. This check valve is required to allow air to bleed off during priming of the injection pump. The recirculation and priming check valve is also necessary to allow the system to detect if the pump is primed. See Figure 1 on page 13.

PLUMB THE OPTIONAL RINSE ASSIST SYSTEM


The optional Rinse Assist system is recommended to enhance the performance of the Rinse Assist Ready Sidekick Pro injection pump. The Rinse Assist system provides an automated rinse function to flush chemical build up or residue which may collect in the injection pump from the vehicle cabin and allows the operator to rinse the injection pump between chemical applications without directly handling hazardous chemicals.


NOTE:

The following components are NOT included with the Rinse Assist Kit (P/N 117-0171-733) but will be required to complete the system installation:

- Rinse fluid supply tank
- Optional chemical reclaim or catch tank
- Rinse fluid supply plumbing
- Rinse fluid
- Miscellaneous fittings

FIGURE 10. Recommended Injection System Plumbing with Optional Rinse Assist Kit

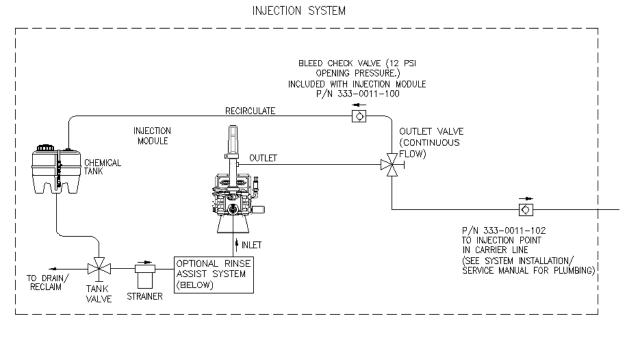

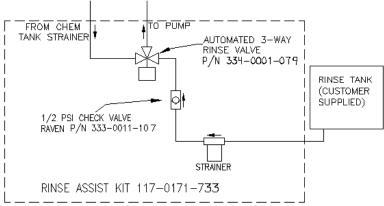

CANBUS AND POWER CONNECTIONS

The Raven Sidekick Pro connects to a Raven CANbus system via a CAN motor control cable and requires both a clean logic power and a high current power connection.

NOTE: Refer to the installation manual for the specific CAN control console for detailed information about installing and powering a CAN system.

GENERATION 1 CABLING PLATFORM

The logic and high current power connections must be routed through a properly sized relay (rated for 20 Amps or greater) and connected directly to battery. This configuration protects the injection system's electrical components and prevents the implement battery from discharging if left alone for long periods of time.

BEST PRACTICES

The information below illustrates proper methods for wiring a CANbus system. The main points of CAN installation are summarized below.

NOTE: Following these recommendations will result in the most robust system possible while greatly reducing CAN communication problems.

- 1. Always use sealed connectors with dielectric grease. Avoid unsealed, crimped connections (i.e. butt connectors).
 - In addition to using dielectric grease, mount all CAN terminators (P/N 063-0172-369) with the connector pointing down to avoid collecting water and/or chemical. Liquids collecting within the terminator can corrode pins and may cause CAN communication issues.
- 2. Connect the power directly to a controlled clean power source.
- 3. Connect the ground directly to the vehicle's battery.
- 4. Node logic power should be connected to a clean power bus relay.
- 5. Use dedicated bus bars to connect the console and all nodes to the same source for both power and ground. See Figure 11 on page 26.
- 6. Provide relays to switch power on and off to avoid draining the battery. Raven recommends connecting the console to a clean power source (at relay) and using the console 'orange' wire to activate the relay. This makes the console the master power switch and allows engine shutdown without turning off the console. See Figure 11 on page 26.

CAN TERMINATORS

Two CAN terminators (P/N 063-0172-369) are required to provide optimal signal integrity through the CANbus. These terminators should be installed at each end of the CANbus. A CAN power adapter tee cable (P/N 115-0171-368) should be placed toward the front of the bus with one end terminated. CAN power, obtained from a switched power source, runs throughout the bus to act as a shield.

FIGURE 11. Generation 1 CAN Node Power Wiring Diagram

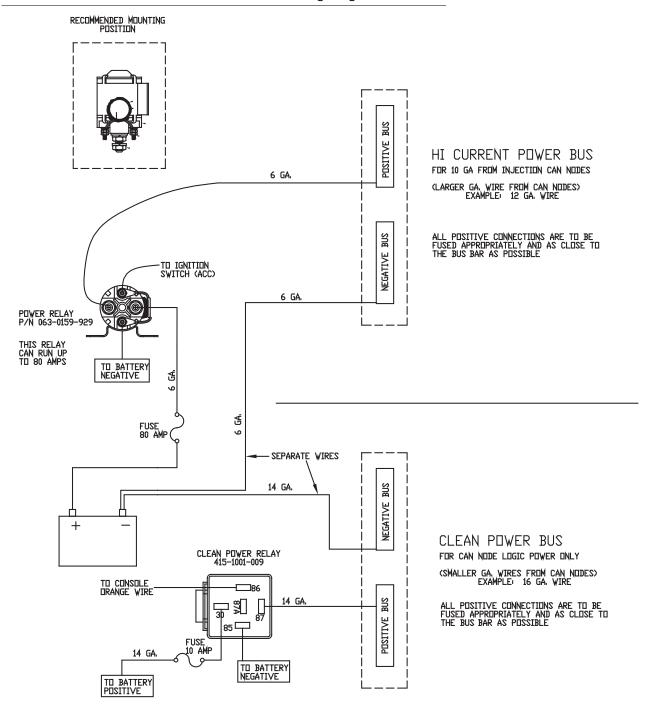


FIGURE 12. Generation 1 35' CAN Motor Control Cable with Agitator Connection (P/N 115-0172-192)


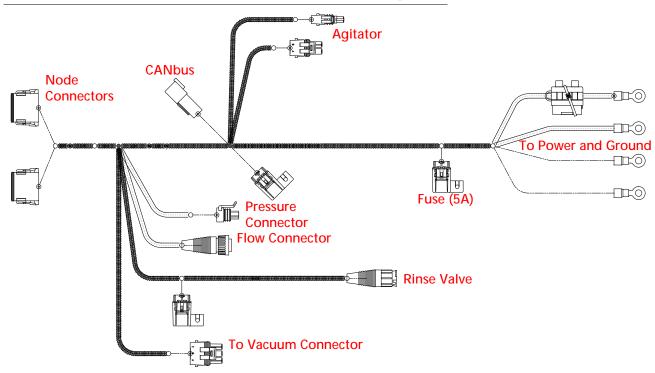


FIGURE 13. Generation 1 CAN Extension Cables with Tee and Passive Terminator

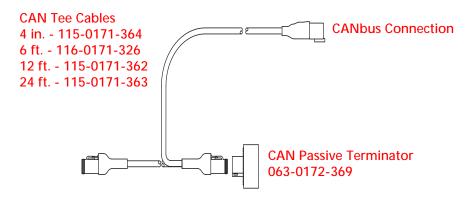

GENERATION 2 CABLING PLATFORM

The logic and high current power connections for the first Sidekick Pro injection pump are provided within the chassis cable installed on the vehicle. If additional Sidekick Pro injection pumps will be added, a separate cable will be required to provide power for each additional pump. Refer to Figure 15 on page 30.

BEST INSTALLATION PRACTICES

The information below illustrates proper methods for wiring a CANbus system. The main points of CAN installation are summarized below.

NOTE: Following these recommendations will result in the most robust system possible while greatly reducing CAN communication problems.

1. Always use sealed connectors with dielectric grease. Avoid unsealed, crimped connections (i.e. butt connectors).

CHAPTER 3

In addition to using dielectric grease, mount all CAN terminators (P/N 063-0172-369) with the connector pointing down to avoid collecting water and/or chemical. Liquids collecting within the terminator can corrode pins and may cause CAN communication issues.

- 2. Connect the power directly to a controlled clean power source.
- 3. Connect the ground directly to the vehicle's battery.
- 4. Node logic power should be connected to a clean power bus relay.
- 5. Use dedicated bus bars to connect the console and all nodes to the same source for both power and ground. See Figure 11 on page 26.
- 6. Provide relays to switch power on and off to avoid draining the battery. Raven recommends connecting the console to a clean power source (at relay) and using the console 'orange' wire to activate the relay. This makes the console the master power switch and allows engine shutdown without turning off the console. See Figure 11 on page 26.

CAN TERMINATORS

Two CAN terminators (P/N 063-0172-369) are required to provide optimal signal integrity through the CANbus. These terminators should be installed at each end of the CANbus. A CAN power adapter tee cable (P/N 115-0171-368) should be placed toward the front of the bus with one end terminated. CAN power, obtained from a switched power source, runs throughout the bus to act as a shield.

FIGURE 14. Generation 2 CAN Motor Control Cable with Agitation (P/N 115-0172-191)


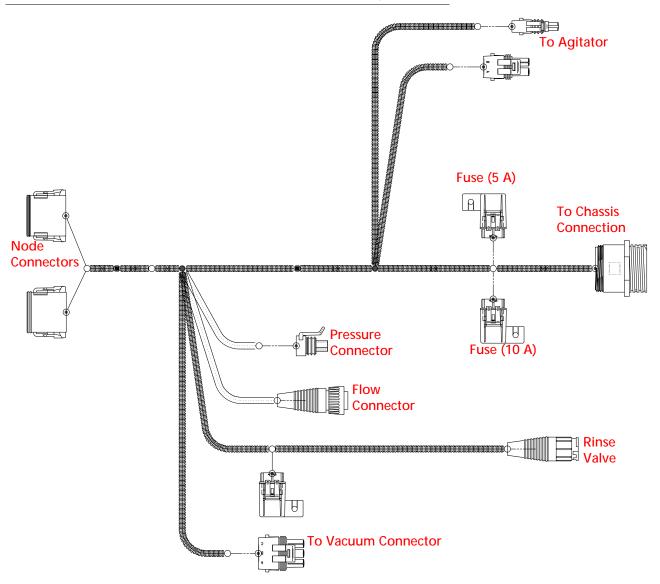



FIGURE 15. Generation 2 Cabling for Additional Injection Pumps (D/N 054-5000-001)

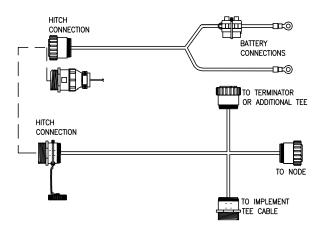

NOTE: For applicators operating more than two high volume injection pumps at the same time, select one power cable and one injection node add on cable for each additional pump:

- Power cable, injection pump add on chassis (P/N 115-0171-953)
- Node Cable, 6' injection pump add on (P/N 115-0171-954)
- Node Cable, 12' injection pump add on (P/N 115-0171-955)
- Node Cable, 24' injection pump add on (P/N 115-0171-956)
- Node Cable, 36' injection pump add on (P/N 115-0171-957)

FIGURE 16. Generation 2 CAN System Wiring Diagram (D/N 054-5000-001)

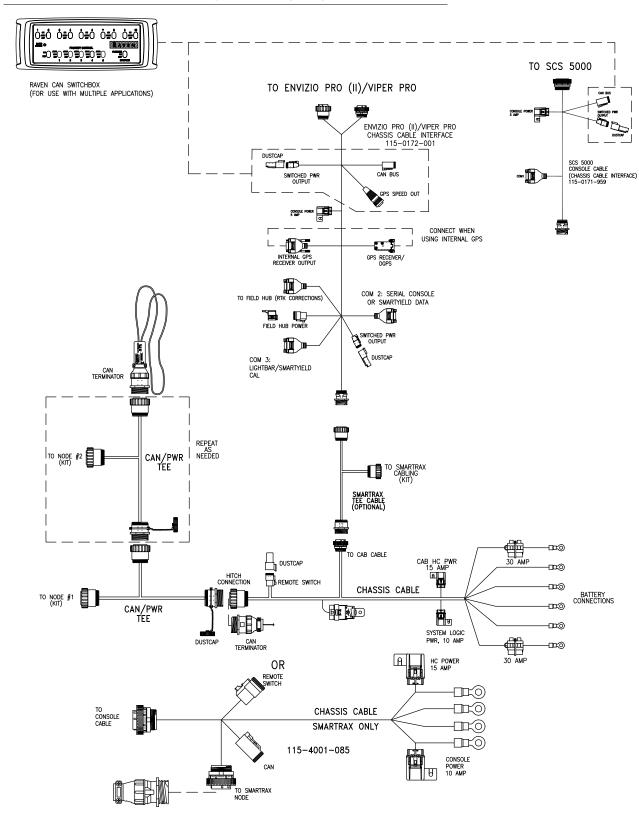


SIDEKICK PRO CANBUS CONNECTION

Review the following diagrams for assistance with installation and connection of the injection pump to the CANbus system.

NOTE: The high current power and ground lead wires are larger gauge wire than the logic power and ground leads.

FIGURE 17. CAN Motor Control and Pump Connection (D/N 054-6400-006)

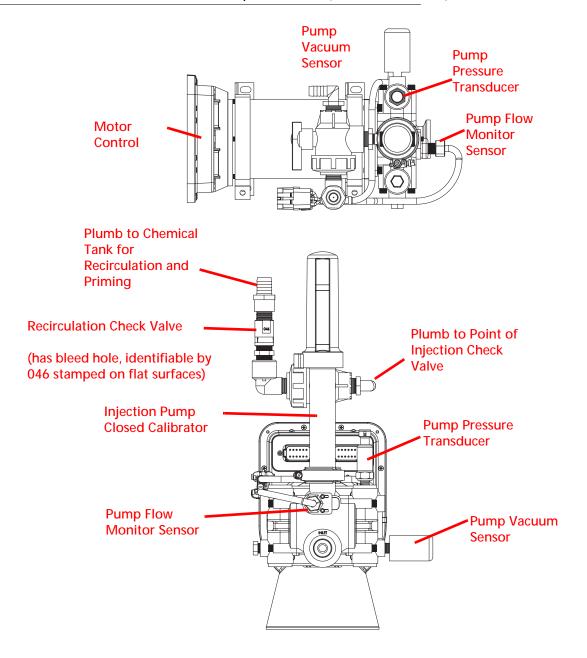

DETECTING AND ADDRESSING THE MOTOR CONTROL NODE


Review the CAN setup section of the Raven control console manual for detailed CANbus system information.

ALTERNATE METHOD TO READDRESS THE INJECTION MOTOR CONTROL NODE

The Sidekick Pro motor control node may be readdressed using either the process described in the CAN control console manual, or by the following procedure:

- 1. Begin readdressing nodes as described in the Raven control console manual.
- 2. When prompted to readdress the product number for the injected product, pass a metal object across the calibration sensor located at the point of the white arrow on the side of the node housing.

FIGURE 18. Motor Control Node Calibration Sensor

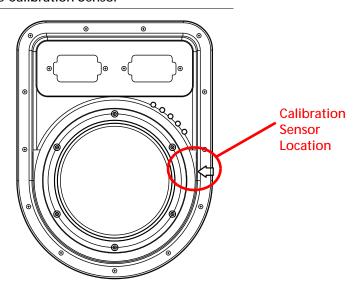

3. Complete the procedure to readdress nodes as described in the Raven control console manual.

VERIFYING INSTALLATION OF THE SIDEKICK PRO

NOTE:

Before filling the tank with chemical for the first time, thoroughly vacuum the chemical supply tank and clean any plastic or metal particles that may be left from the manufacturing or installation process. If these particles get stuck within the injection pump, they may cause a significant reduction in pump accuracy. Turn the hand valve(s) to allow the tank to drain without running through the pump or injection plumbing and thoroughly rinse tank prior to testing or running the injection system for the first time.

Perform the procedures outlined in the Normal Application Mode section on page 40 to verify that the system is installed properly.

Fill the chemical supply tank with clean water when checking the installation. Check for any leaks on all plumbing connections before applying chemicals with the injection system. It is recommended to check the system periodically and replace worn or damaged connections, valves, or hoses.

CHAPTER

CALIBRATION AND OPERATION

4

CONTROL CONSOLE CALIBRATION

Once installation of the injection system has been verified, and the motor control node is recognized by the CAN control console, the Sidekick Pro and console must be calibrated to provide accurate control of the injected product.

NOTE: The Sidekick Pro motor control node is only capable of operating in a liquid chemical application mode.

Regardless of which control console is used to control the Sidekick Pro, the following settings must be calibrated or programmed to ensure proper control and operation of the pump:

- Pump Type
- Meter Cal
- Valve Type and Valve Cal
- Rate Cal
- Flow Cal or FFR Frror Cal
- Pressure Transducer Cal

NOTE:

These settings must be programmed for each injection product or pump which will be used to control product during an application. Refer to the specific control console manual for instructions on programming these settings or other calibration information on the console.

PUMP TYPE

The type of pump used for chemical injection must be selected during the initial product calibration for each injection pump connected to the control system. Select either "High, 5-200 oz./min." [1.5-59 dl/min.] or "Low, 1-40 oz./min." [0.3-11.8 dl/min.] for each product control channel.

NOTE:

Firmware version 1.20 or higher is recommended for the Sidekick Pro injection node. Refer to the specific Raven control console operation manual for information on checking and updating node firmware versions for each node on the CANbus.

VIPER PRO


NOTE:

Software version 3.6 or higher will be required to select the pump type on the Viper Pro field computer.

If using Viper 4, refer to the ROS Sidekick Calibration and Operation Manual (P/N 016-0171-564) for operation and calibration information.

To set the pump type on the Viper Pro field computer:

- 1. Touch the Product Control area at the bottom of the main screen.
- 2. On the CAN Controller Status screen, select the control channel to which the injection pump is assigned.

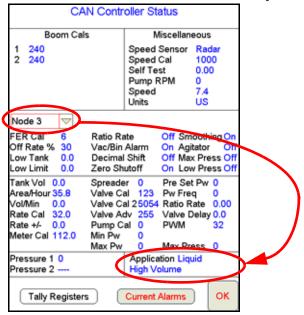

- 3. Touch the Application area at the bottom of the screen and select the High or Low Volume options as appropriate for the pump connected to the selected control channel.
- 4. Repeat this process for any additional injection pumps connected to other control channels.

ENVIZIO PRO

NOTE: Software version 3.4 or higher will be required to select the pump type on the Envizio Pro or Envizio Pro II field computers.

To set the pump type from the field computer Home screen:

- 1. Touch the Tools Menu icon and select the Product Control icon from the System menu.
- 2. On the Product Control Configuration screen, toggle the control channel icon in the upper, right corner of the screen to select the appropriate control channel for the injection pump.
- 3. Touch the Pump Type button.
- 4. Select the High or Low Volume options as appropriate.
- 5. Repeat this process for any additional injection pumps connected to other control channels.

SCS 4000/5000 SERIES CONSOLES

NOTE: Software version 3.4 or higher will be required to select the pump type on the SCS 4000/5000 Series consoles

The pump type setting is available in the initial calibration sequence. The SCS console will automatically start the initial calibration sequence when a Sidekick Pro motor control node is detected on the CANbus for the first time.

Use the CE key to toggle the HIGH VOLUME PUMP or LOW VOLUME PUMP setting for the pump connected to the highlighted control channel.

If the console has already been programmed, use the following process to access and change the pump type setting.

1. Press and hold the SELF TEST key.


- 2. The display will flash the current settings. After 12 seconds, the display will stop on US ACRES.
- 3. Press CE to change the working units.
- 4. Press ENTER to accept the new setting and proceed to the next screen.
- 5. Repeat step 3 and step 4 as necessary for the system settings.
- 6. When the console displays HIGH VOLUME PUMP, press the CE key to toggle between the HIGH VOLUME PUMP and LOW VOLUME PUMP options.
- 7. Press the ENTER key when the appropriate pump type is selected to save the setting and proceed with the initial calibration sequence.

MFTFR CAL

The meter cal value for the Sidekick Pro injection pump may be found on the label located on the pump motor. Enter this value as the initial meter cal in the control console.

NOTE: The meter cal may be adjusted to refine calibration of the chemical injection pump. Refer to the Calibrate the Injection Pump section on page 42 to check or refine the meter cal.

FIGURE 1. Sidekick Pro Pump Motor Label with Meter Cal

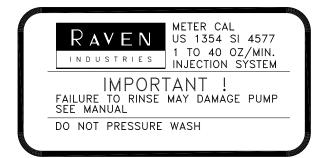



VALVE TYPE AND VALVE CAL

The initial valve cal value for any injection pump is 123. When controlled via a CANbus connection, the Sidekick Pro pump should be set up as a "Standard Valve" on the control console to ensure proper control of the injection pump.

NOTE: The initial valve cal may be adjusted to refine Sidekick Pro system response for various application needs. Refer to the specific control console manual for more information.

RATE CAL

Enter the desired rate of injected chemical in ounces per acre [deciliters/hectare].

VERIFYING FLOW RATE LIMITS

Before beginning to apply product, use the following formula to verify that Sidekick Pro is capable of applying at the target application rate and speeds:

Volume/Minute = $\frac{\text{Rate} \times \text{Speed} \times \text{Width}}{5940[60,000]}$

Be sure that the calculated volume per minute is within operating tolerance of the injection pump installed on the implement.

	P/N 063-0173-081	P/N 063-0173-103
Flow Output Range	5-200 oz./min.	1-40 oz./min.
	[1.5-59 dl/min.]	[0.3-11.8 dl/min.]

FOR EXAMPLE:

U.S. Units. Given a target rate of 75 oz./acre, a target application speed of 11.0 MPH, and a boom width of 85 ft. (1020 in.):

Volume/Minute =
$$\frac{75 \times 11.0 \times 1020}{5940}$$
 = 141.67oz/min

Thus, the desired rate of 75 oz./acre is within the capacity of the 5 - 200 oz./min. pump, but will not be acceptable for the 1 - 40 oz./min. pump.

Metric Units. Given a target rate of 50 dl/ha, a target application speed of 17.0 km/h, and a boom width of 25 m (2500 cm):

Volume/Minute =
$$\frac{50 \times 17.0 \times 2500}{60000}$$
 = 35.42dl/min

Thus, the desired rate of 50 dl/ha is within the capacity of the 1.5 - 59 dl/min. pump, but will not be acceptable for the 0.3 - 11.8 oz./min. pump.

FLOW CAL (ENVIZIO PRO ONLY)

The flow cal value is used to set the flow error tolerance of chemical injection applications. Increase the flow cal value to set a tighter tolerance. Set the flow cal to zero to turn off all flow monitor alarms for the injected chemical.

NOTE: The range for the flow cal is 0 through 9. The default value for any Sidekick Pro injection pump is 6.

FER CAL (SCS 4000/5000 SERIES AND VIPER PRO ONLY)

The FER (Flow to Encoder Ratio) error cal value is used to set the flow error tolerance of chemical injection applications. Increase the FER error cal value to set a tighter tolerance. Set the FER error cal to zero to turn off all flow monitor alarms for the injected chemical.

NOTE: The range for the FER error cal is 0 through 9. The default value for any Sidekick Pro injection pump is 6.


PRESSURE TRANSDUCER CALIBRATION

NOTE: Injection pump software version 1.25.2 and later transducer is pre-calibrated.

It is not necessary to calibrate the pressure transducer and pump.

Pressure of the injected product is monitored by a pressure transducer connected to the Sidekick Pro pump. Pressure of the carrier product is monitored by an optional boom or carrier product line pressure transducer.

FIGURE 2. Optional Boom Pressure Transducer Location

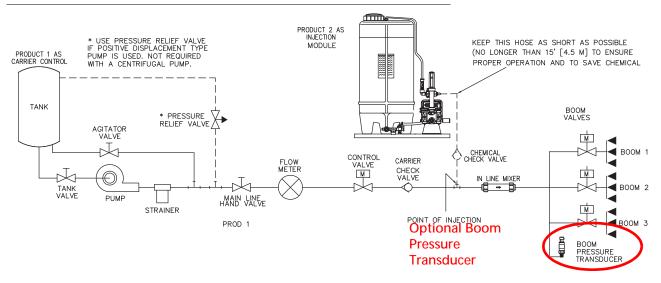

NOTE: The boom or carrier pressure transducer may be installed either as shown in the figure above or upstream of the point of injection.

Sidekick Pro uses these pressure transducers to verify injection status and for error detection. If an optional carrier or boom pressure transducer is not installed, the Sidekick Pro will not provide low pressure alarms during chemical injection applications.

CALIBRATING THE PUMP TRANSDUCER

NOTE: The following process offers a general overview of calibrating or resetting the Sidekick Pro pump pressure transducer. Refer to the operation manual for the specific control console for detailed navigation and calibration of the pressure transducer or pressure display.

- 1. Turn off the injection pump and product control system and ensure there is no pressure at the pump outlet port.
- 2. Select or display the set up screens for the correct product.
- 3. Verify no product pressure is in the injection lines.
- 4. Enter a value of zero for the pressure calibration value.

NOTE: The operator has the option of disabling all feedback for the high and low pressure alarms via the control console menus.

CONTROL FEATURES AND APPLICATION MODES

The following sections outline control features and application modes which may be used with an injection system.

The following modes are available for rate control of injected chemicals:

- Normal Application Mode
- Ratio Rate Mode

NORMAL APPLICATION MODE

Operation of the Sidekick Pro injection pump and control of injected chemicals in normal mode is the same as controlling standard products on a Raven CANbus and will utilize the same operator input. Review the control console manual for specific operation instructions.

NOTE: The ratio rate option must be disabled to control injected chemical application in normal mode. The default setting for the ratio rate feature is disabled.

The following procedure outlines the general operation of Sidekick Pro and controlling an injected chemical.

NOTE: Perform pump priming and calibration checks before beginning to apply an injected chemical. Be sure to verify console calibration settings for each injection pump before operating the Sidekick Propump(s).

- 1. Check injection system hand valves and ensure that product will be routed to the point of injection and boom valves.
- 2. Toggle the master boom switch to the off position.
- 3. Turn product control on for each of the injected chemical(s) on the control console.
- 4. Select manual or automatic mode of product control for each Sidekick Pro pump. In automatic control mode, the control node will automatically adjust rate control based on speed and active boom sections. In manual mode, the machine operator manually controls the rate of chemical injection.
- 5. Accelerate to at least 0.7 MPH [1.1 km/h] and toggle the master boom switch to the on position. The Sidekick Pro injection pump will begin injecting product into the main product line at the injection point.

NOTE: A self test speed may also be entered on the control console to simulate a vehicle speed for testing purposes.

If the pump does not turn on or an error is displayed, verify calibration values in the control console, make sure the system has a rate cal, speed, and an active boom section, and verify that the pump is primed. See Chapter 7, Troubleshooting, if the pump still does not respond.

- 6. To shut the injection pump off:
 - a. Toggle the master boom switch to the off position.
 - b. Toggle the selected injection product(s) off.
 - c. Slow the vehicle speed to below 0.7 MPH [1.1 km/h].

RATIO RATE APPLICATION MODE

The ratio rate application mode allows the operator to apply an injected chemical at a rate proportional to the carrier product flow rate. The ratio rate application mode must be enabled via the control console and a ratio rate cal value must be entered for each product controlled in ratio to the carrier.

NOTE:

The carrier product must be programmed on control channel 1 and the ratio rate application mode must be enabled. If a carrier product is not set as "product 1," the low pressure alarm will not function even if the alarm is enabled on the control console.

If the off rate alarm is triggered frequently during injection applications in ratio rate mode, access the volume per minute display on the control console and verify that the target flow rate is within the application range for the pump.

The ratio rate calibration value is entered as the ratio of injected chemical to carrier in ounces per gallon [deciliters per liter].

FOR EXAMPLE:

If the desired ratio of injected chemical concentration is 2 ounces per gallon [0.59 deciliters per liter], enter a value of 2 [0.59] for the ratio rate cal value. Once the operation conditions in the Normal Application Mode section on page 40 are set, the system will automatically adjust the rate of injected product in proportion with the carrier product flow rate.

FLOW MONITOR FEATURES

The injection node is capable of detecting the following flow error conditions:

- Maximum vacuum (plugged strainer, chemical too thick)
- Plugged pump valve or injection line
- · Empty tank
- · Severe leak on the inlet or outlet hose
- Hand valves in the wrong position

Each of these flow errors are isolated to provide minimal troubleshooting and to reduce machine down time. For assistance troubleshooting the injection system, refer to Chapter 7, Troubleshooting. Refer to the console manual for information on disabling audible alarms for these error conditions.

AGITATION

An optional tank agitator may be used to mix chemical suspensions and help ensure uniform application. If an agitator is installed with the injection system, enable the agitator feature to power the agitator motor. Refer to the console specific section in Chapter 5, Setting Application Mode and Injection Diagnostics, for information on enabling the agitator feature.

SIDEKICK PRO PRIMING AND CALIBRATION

Before starting application of injected products, perform the following procedures to ensure the system is properly calibrated and ready for chemical application:

- 1. Verify control console setup
- 2. Prime the injection pump
- 3. Calibrate the injection pump


VERIFY CONTROL CONSOLE SETTINGS

Review the Control Console Calibration section on page 35 and verify that the correct settings for the chemical injection product are programmed for the correct product node or product number. See Chapter 5, Setting Application Mode and Injection Diagnostics and the controller operation manual for instructions on programming the settings required for the injection system.

PRIME THE INJECTION PUMP

- 1. Open the hand valve(s) between the supply tank and injection pump.
- 2. If installed, set the hand valve on the injection pump outlet to recirculate product back to the supply tank.
- 3. Lift the plunger handle on the pump calibrator to the top of the calibration cylinder.
- 4. Verify the following conditions are present:
 - a. Injection pressure is less than 12 PSI [82.7 kPa]

- b. Pump is in the off condition
- c. Vacuum pressure less than 11.5 inches of mercury

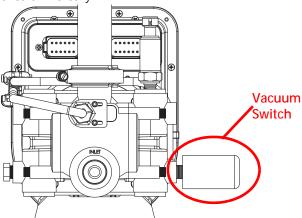

NOTF:

The vacuum switch on the pump will engage and a flow alarm will be displayed if product cannot be drawn into the pump (e.g. vacuum pressure at or above 11.5 inches of mercury). Check screens, hose diameter and any hand valves between the chemical tank and pump inlet. Also, verify that the product is flowing freely. Cold temperatures and low viscosity products may cause high vacuum pressures and cause the pump not to operate properly.

- 5. On the control console, navigate to the Injection Diagnostics display and begin the pump priming procedure. Refer to Chapter 5, Setting Application Mode and Injection Diagnostics and the console specific section for details and to locate the Injection Diagnostics display.
- 6. Begin the priming procedure and allow the pump to prime. The priming procedure will run until the controller detects the pump has primed. If the pump is unable to prime, the console will end the priming procedure after two minutes and display a "prime time-out" message.

NOTF:

If the console displays an error message during the priming process, verify that the conditions listed in step 4 are present. If the problem continues, see Chapter 7, Troubleshooting, to resolve issues during the pump priming process.


Press the "End Prime" button to stop the priming procedure at any time. If the pump fails to prime successfully after the first attempt, restart the priming procedure. If the pump is still unable to prime successfully, refer to Chapter 7, Troubleshooting, for assistance diagnosing issues with the injection system.

CALIBRATE THE INJECTION PUMP


Prior to starting a chemical injection application, verify that the pump is properly calibrated and operational by performing a pump calibration.

- 1. Ensure the pump is primed as described in the Prime the Injection Pump section on page 41 before proceeding with the calibration process.
- 2. Remove the cover from the injection pump calibrator.
- 3. Press the calibrator all the way down and replace the calibrator cover.

FIGURE 3. Sidekick Pro Pump Calibrator

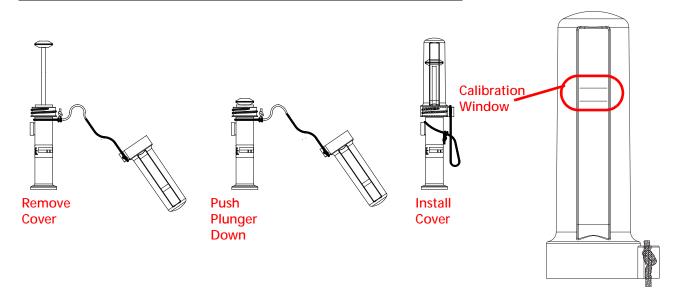

- 4. Verify the following conditions are present:
 - a. Injection pressure is less than 12 PSI [82.7 kPa]
 - b. Pump is in the off condition
 - c. Vacuum pressure less than 11.5 inches of mercury

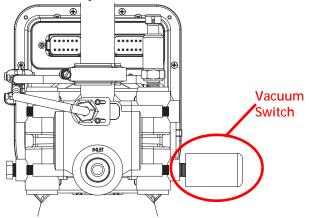

NOTE: The vacuum switch on the pump will engage and a flow alarm will be displayed if product cannot be drawn into the pump (e.g. vacuum pressure at or above 11.5 inches of mercury). Check screens, hose diameter and any hand valves between the chemical tank and pump inlet. Also, verify that the product is flowing freely. Cold temperatures and low viscosity products may cause high vacuum pressures and cause the pump not to operate properly.

5. On the control console, navigate to the Injection Diagnostics display and begin the pump calibration. Refer to Chapter 5, Setting Application Mode and Injection Diagnostics and the console specific section details to locate the Injection Diagnostics display.


6. Begin the calibration process on the control console. The pump will proceed to run until the console detects 1 oz. [0.3 dL] of chemical has been passed through the pump and the console displays a "CAL complete" message.

NOTE: To stop calibration while in progress, at any time pass a metal object past the calibration sensor.

If the console displays an error message during the priming process, verify that the conditions listed in step 4 are present. If the problem continues, see Chapter 7, Troubleshooting, to resolve issues during the pump calibration process.

After the initial calibration has been completed, the injection pump calibration process may be re-initiated by passing a metal object (e.g. screw driver or spare bolt) past the integrated calibration sensor twice.

FIGURE 4. Calibration Sensor

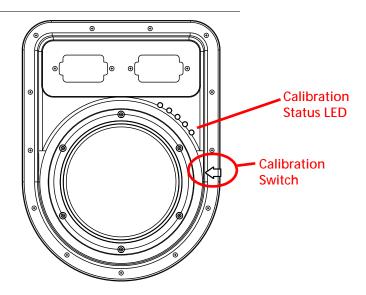

7. Check the calibrator plunger on the injection pump.

The black ring on the plunger should stop within the "window" markings on the calibrator cover if the pump calibration is successful. If the black ring stops slightly outside of the calibration window, the meter cal value may be adjusted to compensate:

- If the plunger stops below the calibration window, increase the meter cal.
- If the plunger stops above the calibration window, decrease the meter cal.

The initial meter cal should be adjusted in increments of 1% from the default meter cal. If the meter cal must be increased or decreased by more than 5% from the value printed on the pump housing, perform pump maintenance procedures outlined in Chapter 6, System Maintenance. If the problem persists, see Chapter 7, Troubleshooting, for possible solutions to issues with the injection pump.

CHAPTER

SETTING APPLICATION MODE AND INJECTION DIAGNOSTICS

5

Review the specific section for the control console for details on locating and using the injection diagnostics screens with the injection pump.

If using Viper 4, refer to the ROS Sidekick Calibration and Operation Manual (P/N 016-0171-564) for Viper 4 diagnostics information.

VIPER PRO


NOTE:

Raven Sidekick Pro injection pumps (P/N 063-0173-081 or 063-0173-103) are equipped with diagnostic and flow monitoring features for CANbus control consoles. To access complete diagnostic capabilities for the Sidekick Pro injection system, the Viper Pro must have software version 3.3.0.0 or newer. Software updates for the control console may be downloaded from the Raven Applied Technology Division web site:

https://portal.ravenprecision.com/

APPLICATION MODE SETUP


- 1. Touch within the product control area at the bottom of the main screen.
- 2. Select the product node corresponding to the injected product and touch within the first data display, or Feature Settings area.
- 3. Touch the Next button to display the following screen.

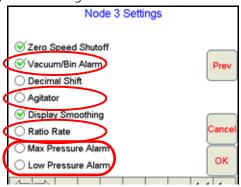


- 4. The Vacuum/Bin Alarm is enabled by default when a motor control node is detected on the CANbus. Deselect this option to disable the audible alarm for injected products.
- 5. When enabled, the Agitator option will send power to an agitator motor via the CAN motor control cable. See Figure 12 on page 27.
- 6. Select the Max Pressure Alarm option to enable alarms for high pressure conditions.
- 7. Select the Low Pressure Alarm option to enable alarms for low pressure conditions.

INJECTION DIAGNOSTICS DISPLAY

- 1. Touch within the product control area on the main screen.
- 2. Select the product node corresponding to the injected product and touch within the second data display, or Product Control Settings area, to display the first Node Settings screen.
- 3. Press the Next button until the Injection Settings screen displays.

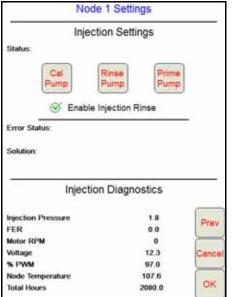

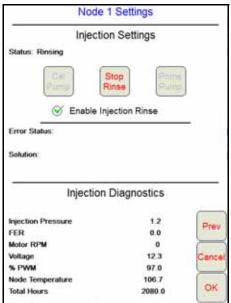

CAL PUMP

Touch the "Cal Pump" button to start the injection pump calibration process.

NOTE: The injection pump should be primed before starting a pump calibration.

RINSE PUMP

Enable the Rinse Assist feature by selecting Enable Injection Rinse. The rinse pump button to start the rinse pump cycle. The cycle will start. The screen will display a Stop Rinse Button. Pressing Stop Rinse will stop the rinse cycle.

PRIME PUMP

Touch the "Prime Pump" button to prime the injection pump. The Viper Pro will stop the pump when the system detects the pump has been primed.

ERROR STATUS AND SOLUTION

If any error conditions are encountered during an injected chemical application, the error type will be displayed on the Injection Settings screen. Refer to Chapter 7, Troubleshooting, for detailed troubleshooting information and solutions.

A brief description of the error code and solution is displayed in the solution area. Refer to Chapter 7, Troubleshooting, for detailed troubleshooting information.

INJECTION DIAGNOSTICS

The following diagnostic information is displayed on the Viper Pro Injection Settings screen:

NOTE: The units for injection system pressure displays may be set to PSI or kPa. Refer to the control console operation manual for information on selecting display units.

Injection Pressure. These values are the pressure observed during the pressure stroke of the left and right pump heads.

FER. The Flow to Encoder Ratio is a tool used in conjunction with the FER Cal to identify the relative efficiency of the pump. This area displays a value between 0 and 100.

NOTE: This number is an indicator of pump health and cannot be used to meter flow from the pump.

Motor RPM. The current RPM of the injection pump motor is displayed in the lower portion of the Injection Settings screen.

Voltage. The high current voltage detected by the CAN motor control node is displayed in this area.

% PWM. The percent PWM value may be used to determine how hard the pump is being driven. A value of 100 indicates the pump is being driven at the maximum.

Node Temperature. The temperature of the motor control node is displayed in this area. This value, in conjunction with the motor RPM, may be useful to help determine how hard the pump is being driven.

Total Hours. The total run time of the selected injection pump is displayed in this area.

ENVIZIO PRO

NOTE:


Raven Sidekick Pro injection pumps (P/N 063-0173-081 or 063-0173-103) are equipped with diagnostic and flow monitoring features for CANbus control consoles. To access complete diagnostic capabilities for the Sidekick Pro injection system, the Envizio Pro must have software version 2.3.0.3 or newer. Software updates for the control console may be downloaded from the Raven Applied Technology Division web site:

https://portal.ravenprecision.com/

APPLICATION MODE SETUP

1. Touch the "Tools Menu" icon on the Envizio Pro Home screen.


2. Select the "Product Control" icon within the System menu and touch the "Feature Settings" button to display the following screen.

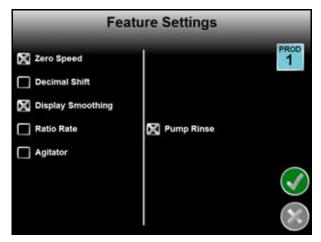

- 3. The Vacuum/Bin Alarm is enabled by default when a motor control node is detected on the CANbus. Deselect this option to disable the audible alarm for injected products.
- 4. When enabled, the Agitator option will send power to an agitator motor via the CAN motor control cable. See Figure 12 on page 27.
- 5. When enabled, the Pump Rinse can be operated.

ENABLING ALARMS

- 1. Touch the "Tools Menu" icon on the Envizio Pro Home screen.
- 2. Select the "Product Control" icon within the System menu and touch the "Alarm Settings" button to display the following screen.

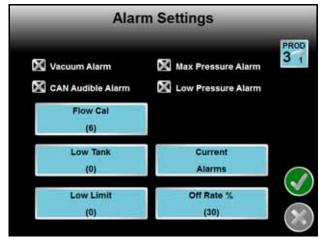


NOTE: Alarm settings for the Sidekick Pro™ injection system will only be displayed if a control channel corresponding to a detected motor control node is selected. Use the "Select Product" icon in the upper, right corner of the display to cycle through the alarm settings for each available control channel.

3. Select the desired alarm conditions to enable on-screen alerts for specific error conditions. If the CAN Audible Alarm setting is selected, the field computer will also sound an alert tone when an error condition is encountered.

Review the Flow Cal (Envizio Pro only) section on page 38 for details on the Flow Cal value. Refer to the Envizio Pro and Envizio Pro II Installation and Operation Manual for more information on the low tank, current alarms, low limit, and off rate percent settings.

INJECTION DIAGNOSTICS DISPLAY

- 1. Touch the Tools Menu icon on the Home screen and select the Product Control icon within the System menu.
- 2. Touch the "Injection Settings" button to display the Injection Settings screen.

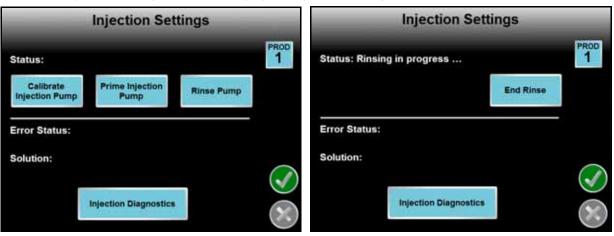

3. When enabled, Pump Rinse Assist can be controlled from this screen.

PRIME INJECTION PUMP

Touch the "Prime Injection Pump" button to prime the injection pump. The Envizio Pro will stop the pump when the system detects the pump has been primed.

CALIBRATE INJECTION PUMP

Touch the "Calibrate Injection Pump" button to start the injection pump calibration process.


NOTE: The injection pump must be primed before starting a pump calibration.

RINSE PUMP

Select "Rinse Pump" to start rinsing the pump. The rinse pump button to start the rinse pump cycle. The cycle will start. The screen will display an End Rinse. Pressing End Rinse will stop the rinse cycle.

INJECTION DIAGNOSTICS

Touch the "Injection Diagnostics" button to view diagnostic information for the selected injection pump.

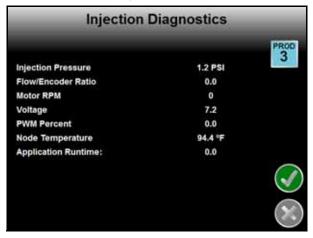

Injection Pressure. These values are the pressure observed during the pressure stroke of the left and right pump heads.

Flow/Encoder Ratio. The flow to encoder ratio is a tool used in conjunction with the Flow Cal to identify the relative efficiency of the pump. This area displays a value between 0 and 100.

NOTE: This number is an indicator of pump health and cannot be used to meter flow from the pump.

Motor RPM. The current RPM of the injection pump motor is displayed in the lower portion of the Injection Settings screen.

Voltage. The high current voltage detected by the CAN motor control node is displayed in this area.

PWM Percent. The percent PWM value may be used to determine how hard the pump is being driven. A value of 100 indicates the pump is being driven at the maximum.

Node Temperature. The temperature of the motor control node is displayed in this area. This value, in conjunction with the motor RPM, may be useful to help determine how hard the pump is being driven.

Application Runtime. The total run time of the selected injection pump is displayed in this area.

SCS 4000/5000 SERIES

NOTE:

Raven Sidekick Pro injection pumps (P/N 063-0173-081 or 063-0173-103) are equipped with diagnostic and flow monitoring features for CANbus control consoles. To access complete diagnostic capabilities for the Sidekick Pro injection system, the SCS controller must have software version 1.90 or newer. Software updates for the control console may be downloaded from the Raven Applied Technology Division web site:

https://portal.ravenprecision.com/

SCS 4000/5000 Series consoles with software versions older than 1.90 will still operate with Sidekick Pro, however, the diagnostic capabilities of the console will not be available.

APPLICATION MODE SETUP

- 1. Press the DATA MENU button until the Product submenu is displayed on the screen.
- 2. Use the up or down arrows to select the Max PSI Err option and use the CE key to toggle the Maximum pressure alarm on or off.
- 3. Use the up or down arrows to select the Low PSI Err option and use the CE key to toggle the Low pressure alarm on or off.
- 4. Use the up or down key to select the Vacuum or Bin Level Alarm to receive an audible alarm if the system detects a vacuum error condition with the injection system.
- 5. When enabled, the Agitator option will send power to an agitator motor via the CAN motor control cable. See Figure 12 on page 27.
- 6. To enable the ratio rate application mode, press the DATA MENU button until the Console submenu is displayed on the screen and select the ratio rate option.
- 7. To enable Rinse Assist mode, press the DATA MENU button until the console submenu is displayed on the screen. Press the CE key to change INJ PUMP RINSE DISABLED to INJ PUMP RINSE ENABLED.

NOTE: Rinse Assist requires console software 2.03.01 or later.

INJECTION DIAGNOSTICS DISPLAY

Press the DATA MENU key until the Run Time Diagnostics screen is displayed.

PROD NODE 2-INJECTION RUN TIME INFO		
FLOW ERROR CODE #		
PUMP-PRESS FER MOTOR RPM TEMP VOLTAGE % PWM HOURS	12.0 99.5 107 99.3 14.2 87.5 23.6	
KEY 1 - START CAL KEY 2 - START PRIMING KEY 3 - START RINSE		

Press - PSI. These values are the pressure observed during the pressure stroke of the left and right pump heads.

Vacuum - PSI. These values are the pressure observed during the vacuum stroke of the left and right pump heads.

FER. The FER (flow to encoder ratio) value is a tool used in conjunction with the FER Error Cal to identify the relative efficiency of the pump. This area displays a value between 0 and 100.

NOTE: This number is an indicator of pump health and cannot be used to meter flow from the pump.

Motor RPM. The current RPM of the injection pump motor is displayed in this area.

Temperature. The temperature of the motor control node is displayed in this area. This value, in conjunction with the motor RPM, may be useful to help determine how hard the pump is being driven.

CHAPTER 5

Voltage. The high current voltage detected by the CAN motor control node is displayed in this area.

% PWM. The percent PWM value may be used to determine how hard the pump is being driven. A value of 100 indicates the pump is being driven at the maximum.

Hours. This value represents the number of hours which the injection node has been engaged for operation.

CHAPTER

SYSTEM MAINTENANCE

6

Proper injection pump maintenance is critical to maintain system performance and extend the lifetime of the injection pump. Perform these maintenance procedures periodically over a season and be sure to store the pump properly when not being used.



MARNING

Always use caution when performing maintenance or servicing an injection pump or system which has been previously pressurized. Wear appropriate protective equipment to prevent contact with hazardous chemicals and rinse the chemical system as instructed by the chemical manufacturer prior to performing maintenance.

MAINTENANCE AND CLEANING



A WARNING

Hazardous chemicals may be under pressure even if the pump has not been in service recently. Before replacing any components on the injection pump, thoroughly rinse the injection pump with clean water to remove excess chemical residue.

Depending upon the type of chemicals used with the Raven injection system, periodic maintenance may be required to ensure proper operation of the injection pump.

NOTE: Some chemicals may require daily maintenance of the injection pump. Review best practices with a chemical supplier to ensure the proper frequency of pump maintenance.

CHECK VALVE O-RINGS



A CAUTION

Valve assembly contains small parts and springs under compression. Wear safety glasses when maintaining or cleaning valve assemblies.

Chemical residue and build up may be present on internal pump components. Wear gloves when servicing internal pump assemblies.

Small particles of rust, sand, or grit may build up around the check valve seals. Over time, this may cause a noticeable decrease in the accuracy of injected product application rates. Clean or replace the o-ring seals periodically to ensure accuracy of the injection system.

- 1. Empty and rinse product from the chemical supply tank and flush the injection pump with water.
- 2. Carefully remove the intake and discharge valve cartridges from the injection pump using a 9/16" Allen wrench.

NOTE: The intake and discharge valve assemblies contain parts which are not interchangeable. To ensure proper re-assembly, it is recommended that the intake and discharge valve assemblies are cleaned and inspected separately.

- 3. Examine the valve assembly o-ring and replace if cut or nicked. These o-rings are made of a chemical resistant compound and should only be replaced with o-rings supplied by a local Raven dealer.
- 4. Disassemble the check valve assemblies as shown in Figure 1 below.

NOTE: Valve assembly contains tension springs and small parts. To prevent the loss of parts, place the valve assembly inside a clear plastic bag while disassembling.

- 5. Examine the guide, spring, poppet and poppet o-ring for wear, pitting, swelling or foreign matter. Clean or replace if necessary. O-rings inside valve assembly are made of a chemical resistant compound and should only be replaced with o-rings supplied by a local Raven dealer.
- 6. Reassemble the intake and discharge plugs as shown in Figure 1 on page 57.
- 7. Apply petroleum jelly to valve body o-rings and replace valve assemblies into the pump head and tighten valve plug.


TABLE 1. Check Valve Assembly Replacement Parts

Discharge Valve Assemblies		
Item	Description	Raven P/N
1 Fitting, Plug	Fitting, Plug	107-0171-519 or
	J. J	107-0171-955 ^a
2	O-Ring	219-0002-912
3	Guide, Poppet	107-0159-934
4	Spring	314-0000-006
5	Poppet	107-0159-935
6	O-Ring (Viton)	219-0007-011 ^b
7	Clip, Retainer	107-0171-576
8	Valve Body, Discharge	106-0159-621
9	O-Ring (Viton)	219-0002-018 ^b

Intake Valve Assemblies		
Item	Description	Raven P/N
1	Fitting, Plug	107-0171-519
2	O-Ring	219-0002-912
3	Retainer, Intake	107-0171-459
4	Spring	314-0000-005
5	Guide, Poppet	107-0171-092
6	Stem, Poppet	107-0171-447
7	O-Ring (Viton)	219-0007-011 ^b
8	Clip, Retainer	107-0171-576
9	Valve, Body Intake	106-0159-622
10	O-Ring (Viton)	219-0002-018 ^b

- a. Plug fitting (P/N 107-0171-955) is used with check valve assemblies (P/N 063-0173-310).
- b. O-Rings included in Pump Seal Kit (P/N 117-0171-657)

FIGURE 1. Check Valve Assemblies

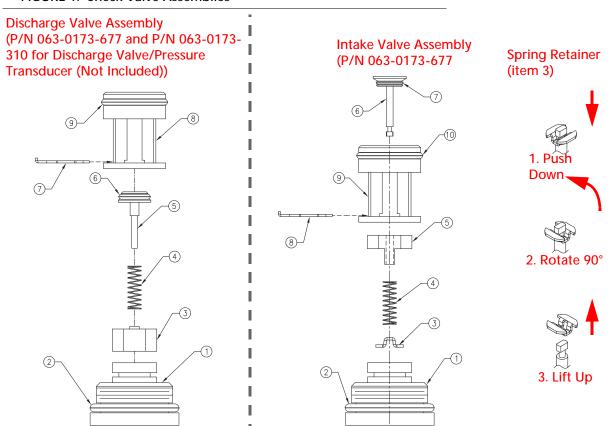

PUMP CAM AND BEARING



A CAUTION

Chemical residue or build up may be present on internal pump components. Wear gloves when servicing internal pump assemblies.

Chemicals may seep into the bearing cavity. The pump cam and bearing housing should be cleaned and inspected periodically to prevent maintenance issues.

- 1. Loosen the four socket head screws holding the pump head to the motor assembly.
- 2. Remove pump from motor and clean surfaces of cam and bearing.
- 3. Examine the sealed bearing. If the bearing does not turn freely or smoothly, replace the bearing.
- 4. Apply a heavy coating of automotive grease to the area where the piston engages the cam bearing and reassemble pump to motor.

PISTON SEAL REPLACEMENT



A CAUTION

Chemical residue or build up may be present on internal pump components. Wear gloves when servicing internal pump assemblies.

It is normal to have seepage from the weep hole on the underside of the pump housing. The piston seals in the injection pump housing should be replaced periodically. Replace the seals and piston after approximately 400 pump hours.

NOTE:

New piston seals are supplied in the Pump Seal Kit (P/N 117-0171-657) available through a local Raven dealer. A complete replacement pump kit (P/N 063-0171-924) is available through a local Raven dealer.

9

FIGURE 2. Pump Head and Motor Separation (D/N 016-0171-134)

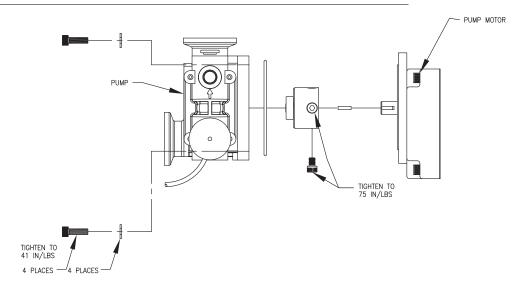


FIGURE 3. Bearing Assembly to Motor Spacing (D/N 016-0171-134)

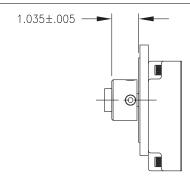


FIGURE 4. Pump Assembly

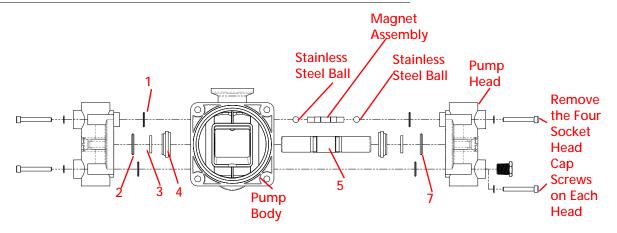


TABLE 2. Pump Assembly Components

Item Number	Description	Raven Part Number
1	O-Ring, Viton	219-0002-015
2	O-Ring, Compound 117965-80	219-0002-117
3	Seal, Slipper, 3/4"	219-0000-125
4	Bearing Piston	325-0000-018
5	Piston	107-0172-467

NOTE: Keep the slipper seal and o-rings in the pump head or the piston.

- 5. Replace the piston and piston bearings.
- 6. Lubricate the piston bearings with general purpose grease.
- 7. Install the slipper seal (Item 3) on the piston.
- 8. Apply general purpose to lubricant to all O-rings.
- 9. Place the lubricated o-ring (Item 2) over the slipper seal.
- 10.Install the O-rings (Item 1) in the head and pump body.

NOTE: If the O-rings fall out before the head is installed, apply more lubricant to the o-ring.

- 11.Install the head.
- 12.Install the stainless steel balls and magnet assembly, and spring.
- 13. Repeat Steps 10 15 for the other side of the pump.
- 14. Tighten the four head bolts to 17 in/lbs.



WARNING

Always use caution when performing maintenance or servicing an injection pump or system which has been previously pressurized. Wear appropriate protective equipment to prevent contact with hazardous chemicals and rinse the chemical system as instructed by the chemical manufacturer prior to performing maintenance.

Perform the following procedure before storing the injection pump for long periods:

NOTE: Failure to perform seasonal maintenance may result in damage to injection system or reduce the working life of the injection pump.

- 1. Empty product from the chemical supply tank and flush the injection pump with water.
- 2. Remove hardened chemical residues or build up by flushing the injection system with:
 - a. kerosene or fuel oil if the last product through the pump was petroleum based.
 - b. soap and water if the last product through the pump was water based.
- 3. Remove the intake and discharge valve assemblies from the pump.



A CAUTION

Chemical residue or build up may be present on internal pump components. Wear gloves when servicing internal pump assemblies.


- 4. Remove the pressure transducer and clean the cavity and transducer body of excess build up.
- 5. Clean and inspect each assembly as instructed in the Check Valve O-Rings section on page 56.

NOTE: Be sure to reinstall the intake and discharge valves into the correct ports on the injection pump.

- 6. Perform the procedure described in the Pump Cam and Bearing section on page 58 to service the cam and bearing.
- 7. Recirculate a 50% water and automotive antifreeze mixture through the injection pump to check pump operation after reassembly as well as prevent freezing of pump components.

9

RETURNING THE PUMP FOR SERVICE OR REPAIR

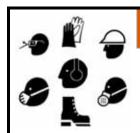

WARNING

Always follow safety labels and instructions provided by the chemical manufacturer or supplier. Always wear proper personal protective equipment when handling or disposing chemicals.




CAUTION

Injection pumps must be cleaned prior to shipping for service or repair. Pumps returned with chemical residue or contamination will not be accepted or subject to service fees.

Refer to the following procedure should it be necessary to return the Sidekick Pro injection pump for service or repairs:

- 1. Prior to disconnecting the injection pump, drain the chemical tank and rinse with clean water.
- 2. If pump is operating, refer to the Seasonal Maintenance and Storage section on page 61 and run clean water through the injection pump. If pump is not operational, proceed with the following steps.
- 3. Remove the inlet and outlet cartridge valves and rinse with clean water.
- 4. Place cartridges in a plastic envelope for shipping.
- 5. Run clean water through both the inlet and outlet port on the pump head.
- 6. Run clean water through the both cartridge ports.

FIGURE 5. Injection Pump Valve Cartridge Replacement Parts

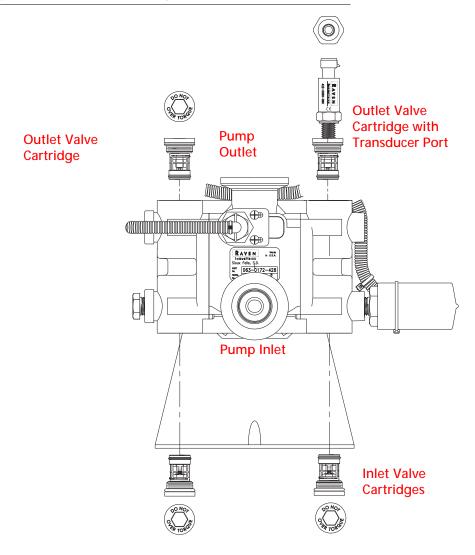

CHAPTER

TROUBLESHOOTING

7

MOTOR CONTROL NODE LED STATUS INDICATORS

The Sidekick Pro integrated motor control node displays the status of the injection pump with the following node status indicators.

FIGURE 1. LED Status Indicators

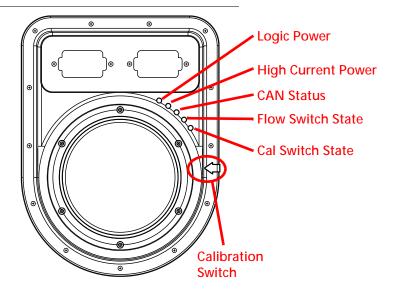


TABLE 1. LED Status Indicators

LED	Status Display	
Logic Power	If logic power is present at the motor control node, the logic power indicator will be on.	
High Current Power	If high current power is present at the motor control node, the high current power indicator will be on.	
CAN Status	The CAN status indicator will flash once per second if the motor control node is communicating on the CANbus. If the motor control node cannot communicate via the CANbus, the CAN status indicator will flash four times per second.	
Flow Switch State	The flow switch indicator will flash once per revolution of the injection pump shaft.	
Calibration Switch State The calibration switch indicator will flash when a metal object is passed the calibration switch sensor.		

ALARMS

TABLE 2. Sidekick Pro Error Codes for Viper Pro and Envizio Pro

Error Description	Possible Cause	Solution
Off Rate Alarm	• Difference between actual and target application rates has been greater than 28% for more than 5 seconds	Required flow rate is out of range for the injection pump. Calculate the volume per minute required for the application and verify rate is within range of the injection pump.
Low Tank Alarm	Chemical supply tank is below the refill threshold level	Refill injection chemical supply tank and reset tank level in VT display.
Flow Error Alarm	• Flow obstruction in inlet cartridges	Perform a pump calibration test. If the pump does not calibrate properly, remove the intake cartridges and perform pump maintenance to clear obstructions.
	Chemical supply tank is out of chemical	Refill chemical supply tank and perform the pump priming procedure.
Flow Error Alarm	Flow obstruction in discharge cartridges	Perform a pump calibration test. If the pump does not calibrate properly, remove the discharge cartridges and perform pump maintenance to clear obstructions.
Low Pressure Alarm	• Injection pressure is lower than carrier pressure	Perform a pump calibration test. If the pump does not calibrate properly, clean the injection pump inlet and discharge valves.
		Calibrate the pump transducer.
		Check lines between injection pump and in-line mixer.
		Verify all hand valves are in the correct position.
		Replace the pump transducer.

Error Description	Possible Cause	Solution
Maximum Vacuum Alarm	Clogged pump strainer	Clean pump strainer and check for obstructions in injection line between the pump inlet and chemical supply tank.
	• Tubing or plumbing size restriction	Verify the proper size of injection supply tubing is used between the chemical supply tank and pump inlet.
	Chemical too thick	Dilute product in chemical supply tank. Some chemicals may not be applied using a direct injection system.
Maximum Pressure Alarm	Clogged or restricted pump outlet supply lines	Check for restrictions or blockages in outlet supply lines. Flush the injection system to clear clogs and residue buildup.
	• Tubing or plumbing size restriction	Verify the proper size of injection outlet tubing is used between the point of injection and pump outlet.
	Faulty PSI transducer	between the point of injection and pump outlet.
	Hand valve closed	Charle hand valves are appn and allow flow from the
	Low injection pressure	Check hand valves are open and allow flow from the injection pump outlet port.
Pressure Sensor Alarm	Boom pressure transducer not connected	• If installed, check that the boom pressure transducer is installed and properly connected.
	• Faulty boom pressure transducer	Replace boom pressure transducer.
	No power to pump motor	Verify that the high current LED on the injection pump node is lit.
Motor/Encoder Alarm	Pump motor or encoder issue	Check motor and encoder connections. Disconnect the injection pump node from the pump motor and check that the motor and encoder connections are seated properly. If these connections appear solid, return pump to a local Raven dealer for service.
HC Power Alarm	• Injection node not connected to high	Verify high current breaker is not tripped.
	current power	Verify battery connections.
Zero Speed Alarm	• Faulty cabling, connection or speed sensor.	Verify speed sensor and signal. Refer to the field computer operation manual for information on testing speed and flow cabling and troubleshooting the speed sensor.
Low Limit Alarm		• Increase vehicle speed.
	• Implement speed or width is insufficient to maintain pump rate and the pump "low limit" rate has become active	• The pump will maintain the programmed low limit rate. If this rate is the desired lowest injection rate, no action is required. If the current field operation requires a lower rate of injection, reduce the programmed low limit setting to allow the pump to reduce the rate of injection. Refer to the console or field computer operation manual for additional information on the low limit feature.

CHAPTER


REPLACEMENT PARTS

8

SIDEKICK PRO INJECTION MODULE PARTS


FIGURE 1. Injection Module Components

REPLACEMENT PARTS, PART NUMBER 063-0173-212 INJECTION MODULE 24 GALLON, 1-40 OZ/MIN, AND PART NUMBER 063-0173-213 INJECTION MODULE 24 GALLON 5-200 OZ/MIN

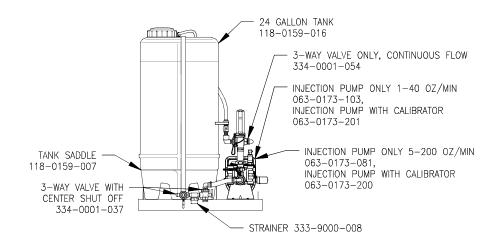

SIDEKICK PRO PUMP REPLACEMENT PARTS

FIGURE 2. Injection Pump Components

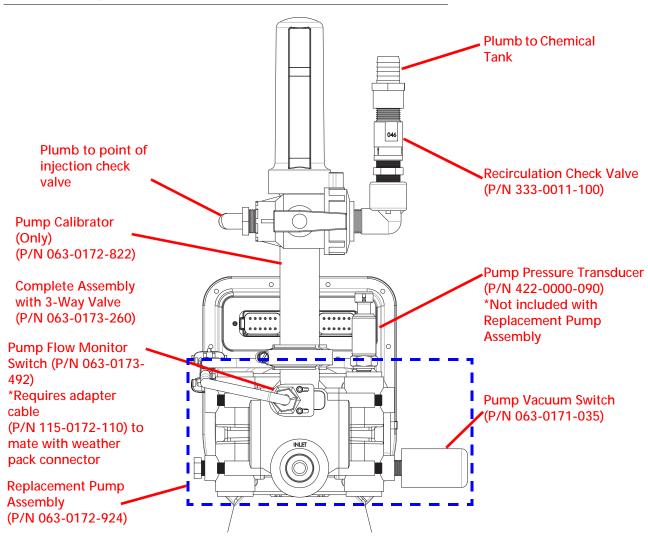

INJECTION PUMP PRESSURE TRANSDUCER



To replace the pressure transducer (P/N 422-0000-090):

1. Disable and shutdown any automatic product control features of the Sidekick Pro injection system and turn off the vehicle when replacing the pressure transducer assembly.



A WARNING

Hazardous chemicals may be under pressure even if the pump has not been in service recently. Before replacing any components on the injection pump, thoroughly rinse the injection pump with clean water to remove excess chemical residue.

- 2. Disconnect the pressure transducer connector on the top of the pressure transducer body. Be careful to keep dust, debris, or liquid chemicals which may seep from the injection pump head from contaminating the cable connection.
- 3. Loosen the pressure transducer while securing the connected fitting to prevent damage to the pump head.
- 4. Apply RectorSeal® or equivalent thread sealant to the new pressure transducer and thread into the pump head.
- 5. Tighten the pressure transducer body two or three quarter turns to secure the pressure transducer.

NOTE: Do not over tighten the pressure transducer. Overtightening the pressure transducer may damage the pump head.

CALIBRATING THE PUMP TRANSDUCER

The following process offers a general overview of calibrating or resetting the Sidekick Pro pump pressure transducer Refer to the operation manual for the specific control console for detailed navigation and calibration of the pressure transducer or pressure display.

NOTE: For pumps that have software version 1.25.2, the pressure transducer is pre-calibrated. No calibration is required.

- 1. Select or display the set up screens for the correct product.
- 2. Turn off the injection pump and product control system and ensure no product pressure in the injection lines.
- 3. Enter a value of zero for the pressure calibration value.

INJECTION PUMP VACUUM SWITCH




A WARNING

Always use caution when performing maintenance or servicing an injection pump or system which has been previously pressurized. Wear appropriate protective equipment to prevent contact with hazardous chemicals and rinse the chemical system as instructed by the chemical manufacturer prior to performing maintenance.

To replace the vacuum switch (P/N 063-0171-035):

1. Disable and shutdown any automatic product control features of the Sidekick Pro injection system and turn off the vehicle when replacing the vacuum switch assembly.

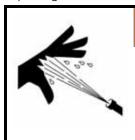

MARNING

Hazardous chemicals may be under pressure even if the pump has not been in service recently. Before replacing any components on the injection pump, thoroughly rinse the injection pump with clean water to remove excess chemical residue.

- 2. Disconnect the vacuum switch connector from the motor control cabling. Be careful to keep dust, debris, or liquid chemicals which may seep from the injection pump head from contaminating the cable connections.
- 3. Loosen the vacuum switch while securing the connected fitting to prevent damage to the pump head.
- 4. Apply RectorSeal® or equivalent thread sealant to the new vacuum switch and thread into the pump head.
- 5. If necessary, slide the protective covering on the vacuum switch back slightly to expose the hex surface for tightening the vacuum switch body.
- 6. Tighten the vacuum switch body two or three quarter turns to secure the vacuum switch.


NOTE: Do not over tighten the pressure transducer. Overtightening the pressure transducer may damage the pump head.

7. Be sure to replace the protective cover over the flow switch before operating the pump.

INJECTION PUMP FLOW MONITOR SENSOR

Perform the following procedure to replace the flow monitor sensor (P/N 063-0173-492).

FIGURE 3. Pump Head and Flow Monitor Sensor

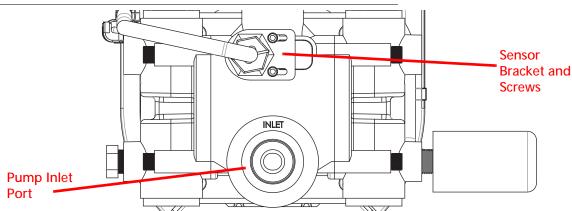


- 1. Disconnect the sensor cable from the motor control cabling.
- 2. Loosen the locking nut on the switch assembly and remove the old sensor assembly from the pump head.
- 3. Loosen the sensor bracket mounting screws enough to allow the bracket to slide freely on the pump head.

NOTE:

It is recommended to replace the sensor bracket if an updated flow monitor sensor is supplied with a new bracket and mounting hardware. The updated flow sensor is designed to improve flow sensitivity while the updated sensor bracket and hardware will help to secure the sensor body properly in the pump head.

FIGURE 4. Flow Sensor Update Kit (P/N 117-0171-455) with Bracket and Hardware

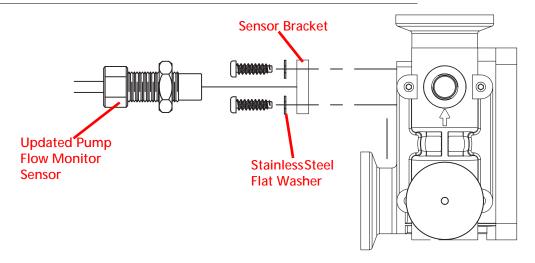

Remove the existing Allen screws and sensor bracket. Loosely mount the supplied bracket to the pump head using the supplied washers and Allen screws. The updated flow monitor sensor and bracket should be mounted to the pump head as shown in Figure 4 above.


4. Thread two 5/16" nuts (not supplied) onto a 5/16" bolt (not supplied) to make a gauge tool.



The gauge tool will be used to help align the sensor bracket and ensure the sensor body is mounted properly on the pump head.

5. Insert the gauge tool into the recess in the pump head to the right side of the sensor bracket as shown in Figure 5 below.

FIGURE 5. Gauge Tool and Flow Sensor Bracket Alignment

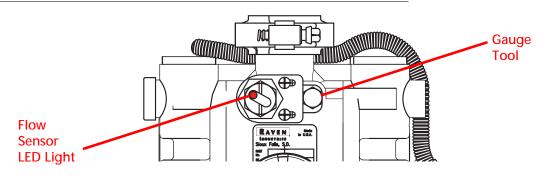

6. Tighten the two Allen head screws to secure the sensor bracket.

NOTE: Leave the gauge tool in place to ensure that the sensor bracket stays properly aligned during the rest of the process. The gauge tool may be removed once the sensor lock nut is tightened.

- 7. Thread the new flow monitor sensor into the pump head until the sensor body contacts the pump head.
- 8. Tighten the sensor assembly a partial turn until the line on the flow monitor sensor is near vertical and the LED is on the left side of the line. Do not overtighten.

FLOW MONITOR SWITCH ADJUSTMENT PROCEDURE

- 9. Set the hand valves for the system to recirculate product to the chemical tank and prime and calibrate the pump.
- 10. Run the injection pump at the lowest injection rate within tolerance for the pump (i.e. 1 oz./min. for 1-40 oz./min. pumps or 5 oz. for 5-200 oz./min. pumps).
 - The LED indicator should be flashing while the pump is running. If the indicator light is not flashing, turn the sensor body a few degrees until the LED flashes.

NOTE: The line on the sensor body should not be more than 45° off of vertical to ensure maximum sensitivity.

Once the sensor assembly is properly set and the LED indicator is flashing, tighten the sensor lock nut to secure the sensor body to the bracket.

CHECK VALVE ASSEMBLIES

FIGURE 6. Injection Pump Valve Cartridge Replacement Parts

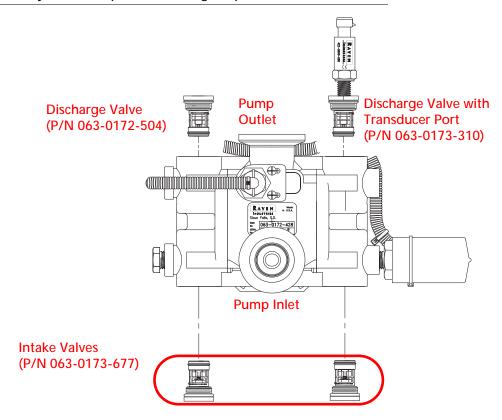


TABLE 1. Pump Seal Kit (P/N 117-0171-657) Replacement Parts

Description	Raven P/N	Qty.
Assembly, Bearing Drive	063-0172-501	1
Piston, Injection Pump, 3/4"	107-0172-467	1
Seal, Slipper 3/4"	219-0000-125	2
O-ring, Buna-N, Black, 3-1/2" ID, 3-11/16" OD	219-0001-153	1
O-Ring, Viton, Brown Color, 9/16" ID, 11/16" OD	219-0002-015	4
O-Ring, Viton, brown Color, 3/4" ID, 7/8" OD	219-0002-018	4
O-Ring, Viton Parker Compound V1274-75, 5/16" ID, 7/16" OD	219-0007-011	4
O-Ring, Viton Parker Compound V1274-75, 13/16" ID, 1" OD	219-0007-117	2
Bearing, Piston, 3/4"	325-0000-018	2

TABLE 2. Check Valve Assembly Replacement Parts


Discharge Valve Assemblies				
Item	Description	Raven P/N		
1	Fitting, Plug	107-0171-519 or 107-0171-955 ^a		
2	O-Ring	219-0002-912		
3	Guide, Poppet	107-0159-934		
4	Spring	314-0000-006		
5	Poppet	107-0159-935		
6	O-Ring (Viton)	219-0007-011 ^b		
7	Clip, Retainer	107-0171-576		
8	Valve Body, Discharge	106-0159-621		
9	O-Ring (Viton)	219-0002-018 ^b		

Intake Valve Assemblies			
Item	Description	Raven P/N	
1	Fitting, Plug	107-0171-519	
2	O-Ring	219-0002-912	
3	Retainer, Intake	107-0171-459	
4	Spring	314-0000-005	
5	Guide, Poppet	107-0171-092	
6	Stem, Poppet	107-0171-447	
7	O-Ring (Viton)	219-0007-011 ^b	
8	Clip, Retainer	107-0171-576	
9	Valve, Body Intake	106-0159-719	
10	O-Ring (Viton)	219-0002-018 ^b	

a. Plug fitting (P/N 107-0171-955) is used with check valve assemblies (P/N 063-0173-310).

b. O-Rings included in Pump Seal Kit (P/N 117-0171-657)

FIGURE 7. Check Valve Spring Retainer Assemblies

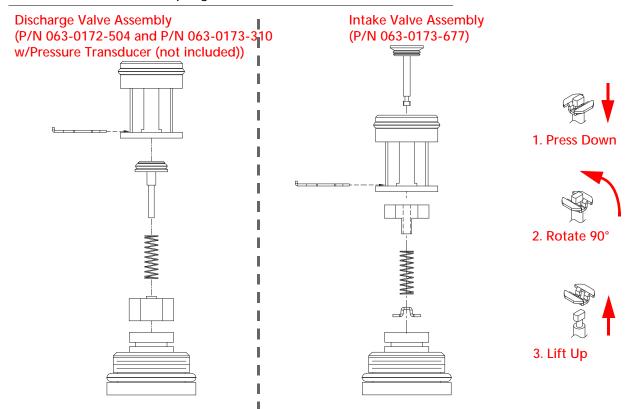

CHAPTER

SYSTEM DIAGRAMS

9

Refer to the following diagrams for connecting a Raven injection system to a new or existing CANbus product control system.

FIGURE 1. Sidekick Pro with Envizio Pro Liquid Product Control System using Generation 1 Cabling (D/N 054-2000-006)

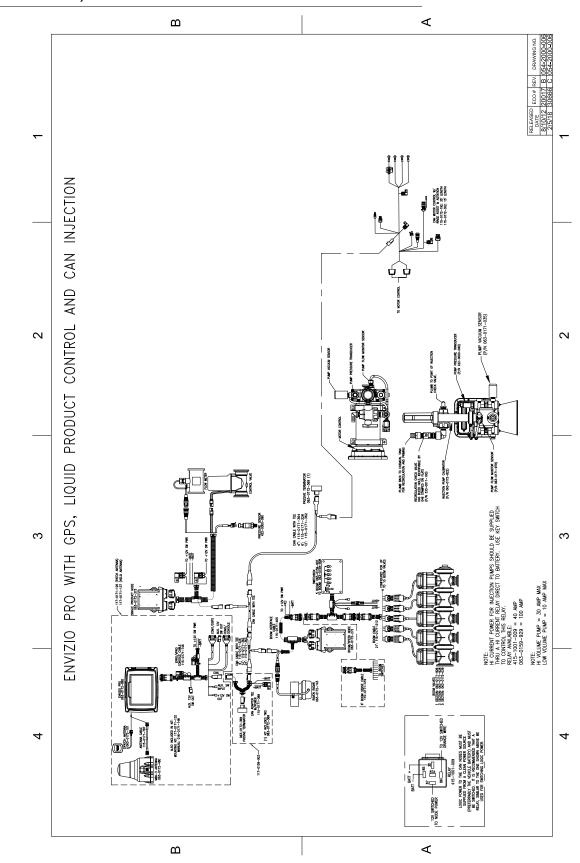


FIGURE 2. Sidekick Pro with Viper Pro Liquid Product Control System (D/N 054-2140-007)


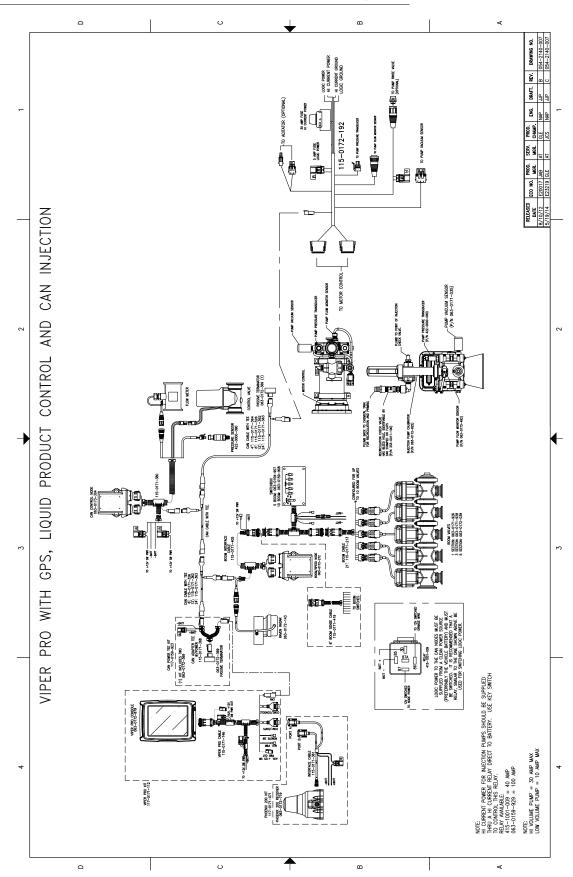


FIGURE 3. Sidekick Pro with SCS 4400 Liquid Product Control System (D/N 054-2840-009)

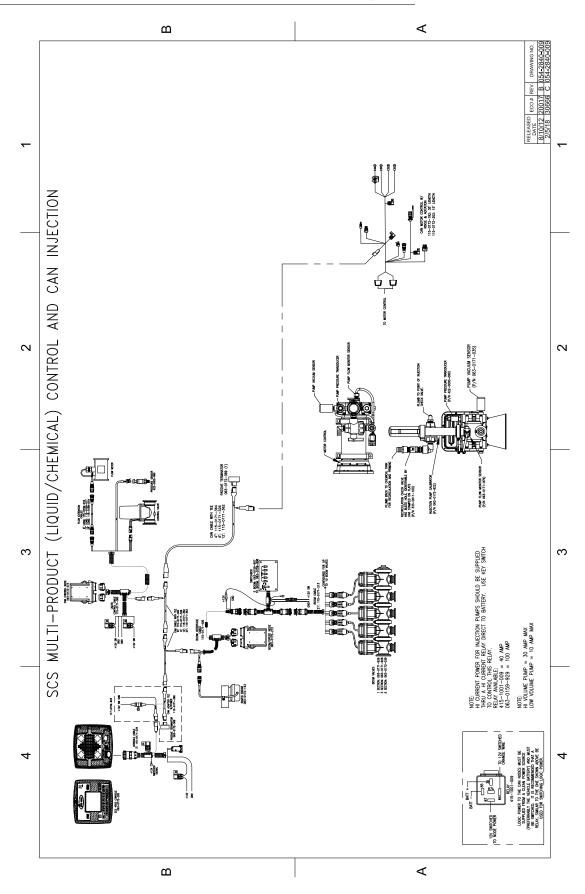

A	Overview 13 Sidekick Pro Pump 20
Application Mode Setup 47 Envizio Pro 49 SCS 4000/5000 Series 53 Viper Pro 47 Application Modes 39 Normal 40 Ratio Rate 40	Verifying Sidekick Pro 33 Maintenance 55 Seasonal Maintenance and Storage 61 Modes.See Application Modes 39
Best Installation Practices 27 Best Practices 25	Overview 5 Injection System Components 5
Calibration and Operation 35 Console Calibration 35 FER Cal (SCS 4000/5000 Series and Viper Pro	Plumbing 22 Closed Calibration System 22
only) 38 Flow Cal (Envizio Pro only) 38 Meter Cal 37 Rate Cal 37 Valve Type and Valve Cal 37 CAN (Controller Area Network)	Optional Rinse Assist System 23 Sidekick Pro Pump 22 Power Connections 24
Addressing the Motor Control Node 33 Alternate Method 33 Best Installation Practices 27 Best Practices 25 CANbus and Power Connections 24 Detecting the Motor Control Node 33 Sidekick Pro Pump 32 Terminators 25, 28	Replacement Parts 69 Check Valve Assemblies 74 Injection Pump Flow Switch 72 Injection Pump Pressure Transducer 70 Sidekick Pro Pump 70
Control Features 39 Agitator 41 Flow Monitor Features 41	Sidekick Pro Priming and Calibration 41 Calibrate the Injection Pump 42 Prime the Injection Pump 41
Features 5 Closed Calibration System 5 Integrated Motor Control Node 6 System Diagnostics 7	Verify Control Console 41 Specifications 8
I and the second	Troubleshooting Alarms 66 Motor Control Node LED Status Indicators 65
Important Safety Information 1 Injection Diagnostics 47 Envizio Pro 51 SCS 4000/5000 Series 53 Viper Pro 48 Installation Chemical Tank 20 Initial Plumbing and Point of Injection 14 Injection Module 18	Verifying Installation of the Sidekick Pro 33

LIMITED WARRANTY

WHAT DOES THIS WARRANTY COVER?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

HOW LONG IS THE COVERAGE PERIOD?

Raven Applied Technology products are covered by this warranty for 12 months from the date of retail sale. In no case will the Limited Warranty period exceed 24 months from the date the product was issued by Raven Industries Applied Technology Division. This warranty coverage applies only to the original owner and is non-transferable.

HOW CAN I GET SERVICE?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries.

WHAT WILL RAVEN INDUSTRIES DO?

Upon confirmation of the warranty claim, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

WHAT IS NOT COVERED BY THIS WARRANTY?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.



FXTFNDFD WARRANTY

WHAT DOES THIS WARRANTY COVER?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

DO I NEED TO REGISTER MY PRODUCT TO QUALIFY FOR THE EXTENDED WARRANTY?

Yes. Products/systems must be registered within 30 days of retail sale to receive coverage under the Extended Warranty. If the component does not have a serial tag, the kit it came in must be registered instead.

WHERE CAN I REGISTER MY PRODUCT FOR THE EXTENDED WARRANTY?

To register, go online to www.ravenhelp.com and select Product Registration.

HOW LONG IS THE EXTENDED WARRANTY COVERAGE PERIOD?

Raven Applied Technology products that have been registered online are covered for an additional 12 months beyond the Limited Warranty for a total coverage period of 24 months from the date of retail sale. In no case will the Extended Warranty period exceed 36 months from the date the product was issued by Raven Industries Applied Technology division. This Extended Warranty coverage applies only to the original owner and is non-transferable.

HOW CAN I GET SERVICE?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries. In addition, the words "Extended Warranty" must appear on the box and all documentation if the failure is between 12 and 24 months from the retail sale.

WHAT WILL RAVEN INDUSTRIES DO?

Upon confirmation of the product's registration for the Extended Warranty and the claim itself, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

WHAT IS NOT COVERED BY THE EXTENDED WARRANTY?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. Cables, hoses, software enhancements, and remanufactured items are not covered by this Extended Warranty. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.

